



APPENDIX C - MAINTENANCE TASKS SORTED BY INTERVAL

A. SCOPE

This appendix contains a listing of all MPD items with interval type and task title, sorted by the most frequent tasks to the less frequent. Tasks with a common interval are sorted by MPD Item Number. This list is generic and may contain tasks which are not applicable to all customer configurations. This listing can be utilized to assist maintenance planners in creating specific airline check packages. This appendix does not represent a comprehensive list of maintenance requirements that may exist in other documents such as, but not limited to, service bulletins and airworthiness directives.



777-200/300 MAINTENANCE PLANNING DOCUMENT
TOTAL LABOR HOURS BY INTERVAL GROUP

INTERVAL	ITEMS	TOTAL LABOR HOURS



777-200/300 MAINTENANCE PLANNING DOCUMENT

TASKS SORTED BY INTERVAL

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
400 AH	400 AH	49-010-00	APU and Generator Lubrication System
APU CNG	APU CNG	53-930-00	APU Compartment - As visible with APU Removed
80 DY	80 DY	33-105-00	Overhead Flight Crew Rest and/or Overhead Flight Attendant Rest Backup Lights System
100 DY	100 DY	32-270-00	Nose Landing Gear Pressure Gage
200 DY	200 DY	33-075-00	Photoluminescent floor proximity lighting.
200 DY	200 DY	33-100-00	Lower Lobe Attendant Rest (LLAR) Back-up Lighting System
250 DY	250 DY	32-011-00	Tire Pressure Indication System (TPIS)
250 DY	250 DY	32-012-00	Tire and Brake Monitoring System (TBMS)
300 DY	300 DY	52-090-00	Passenger Entry Door EPAS Battery
300 DY	300 DY	52-090-01	Passenger Entry Door EPAS Battery
300 DY	300 DY	52-090-02	Passenger Entry Door EPAS Battery
300 DY	300 DY	52-095-00	No. 3 Over-wing Door EPAS/Backup Battery
375 DY	375 DY	28-022-65	AC Fuel Pump Ground Fault Interrupter (GFI) and Ground Fault Protector (GFP)
375 DY	375 DY	28-112-00	Auxiliary Fuel Tank AC Fuel Pump Uncommanded On/Auto Shutoff
375 DY	375 DY	35-162-00	Portable oxygen non-disposable type masks
375 DY	375 DY	52-110-00	Passenger Entry Door EPAS Pressure Gauge
375 DY	375 DY	52-110-01	Passenger Entry Door EPAS Pressure Gauge
375 DY	375 DY	52-110-02	Passenger Entry Door EPAS Pressure Gauge
375 DY	375 DY	52-115-00	No. 3 Over-Wing Door EPAS Pressure Gauge
375 DY 1000 FC	375 DY 1000 FC	52-549-00	Main Deck Cargo Door
400 DY	400 DY	33-080-00	Emergency Lights Battery Packs
400 DY	400 DY	33-110-00	Lower Lobe Attendant Rest (LLAR) Back-up Lighting System
450 DY	450 DY	33-115-00	OFAR/OFAR Back-up Lighting Power Packs
470 DY	470 DY	24-160-00	APU Battery Charge Capacity



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
470 DY	470 DY	24-170-00	Main Battery Charge Capacity
540 DY	540 DY	26-290-00	Portable Halon Fire Extinguishers
560 DY	560 DY	25-135-00	First Aid Kits
560 DY	560 DY	25-160-00	Emergency Flashlights
750 DY	750 DY	52-165-00	No. 3 Over-Wing Door Circuitry
750 DY	750 DY	52-166-00	No. 3 Over-Wing Door EPAS Battery Circuitry
750 DY	750 DY	52-167-00	No. 3 Over-Wing Door Backup Battery Circuitry
750 DY	750 DY	52-255-00	Lower Lobe Attendant Rest Emergency Exit Hatch
750 DY 2500 FC	750 DY 2500 FC	52-553-00	Main Deck Cargo Door
800 DY	800 DY	26-300-00	Portable Water Fire Extinguishers
800 DY	800 DY	33-090-00	Emergency Lights Battery Packs
800 DY	800 DY	33-095-00	OFCR/OFAR Backup Lighting Power Supply Battery Packs
800 DY	800 DY	33-120-00	Lower Lobe Attendant Rest (LLAR) Back-up Lighting System
1125 DY	1125 DY	12-122-00	No. 2 Left and Right Flight Compartment Window Drive Tracks
1125 DY	1125 DY	20-250-10	FOIL/MESH PANELS; ENGINE COWLS, STRUT, LEADING EDGE
1125 DY	1125 DY	20-250-20	FOIL/MESH PANELS; ENGINE COWLS, STRUT, LEADING EDGE
1125 DY	1125 DY	20-251-10	FOIL/MESH PANELS; ENGINE COWLS, STRUT, LEADING EDGE
1125 DY	1125 DY	20-251-20	FOIL/MESH PANELS; ENGINE COWLS, STRUT, LEADING EDGE
1125 DY	1125 DY	20-252-10	FOIL/MESH PANELS; ENGINE COWLS, STRUT, LEADING EDGE
1125 DY	1125 DY	20-252-20	FOIL/MESH PANELS; ENGINE COWLS, STRUT, LEADING EDGE
1125 DY	1125 DY	23-080-00	Voice Recorder System - Four Channel Operation
1125 DY	1125 DY	23-100-00	Voice Recorder System - Under Water Locator Beacon
1125 DY	1125 DY	23-180-00	Low Frequency Underwater Locator Device



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
1125 DY	1125 DY	25-062-00	Life Raft
1125 DY	1125 DY	25-105-00	Crash Axe
1125 DY	1125 DY	25-320-00	Rigid Cargo Barrier Sliding Door Seal
1125 DY	1125 DY	26-277-00	Lower Lobe Attendant Rest Fire Extinguishing System
1125 DY	1125 DY	28-022-60	GFI Relay Check
1125 DY	1125 DY	31-010-00	Flight Data Recorder System
1125 DY	1125 DY	31-030-00	Flight Data Recorder Underwater Locator Beacon (ULB)
1125 DY	1125 DY	52-160-00	Passenger Entry Door EPAS Circuitry
1125 DY	1125 DY	52-310-00	Flight Deck Door Pressure Sensor
1125 DY 2500 FC	1125 DY 2500 FC	52-550-00	Main Deck Cargo Door
1125 DY	1125 DY	56-020-00	Flight Deck Number 2 Windows Guide Bearings
1125 DY	1125 DY	56-030-00	Flight Deck Number 2 Windows Open/Close Function
1125 DY 6000 FC	1125 DY 6000 FC	78-390-01	Inspect Thrust Reverser Inner Wall
1125 DY 6000 FC	1125 DY 6000 FC	78-390-02	Inspect Thrust Reverser Inner Wall
1500 DY	1500 DY	20-450-00	HIRF/Lightning Radio Altimeter Antenna to Transceiver Coax
1500 DY	1500 DY	25-150-00	Smokehoods
1500 DY	1500 DY	25-190-00	Megaphones
1500 DY	1500 DY	26-062-00	Lower Lobe Attendant Rest Smoke Detection System
1500 DY	1500 DY	52-315-00	FLIGHT DECK DOOR SEALS AND BREAKAWAY PANEL SEAL
1500 DY 5000 FC	1500 DY 5000 FC	52-551-00	Main Deck Cargo Door
1500 DY	1500 DY	52-730-00	Flight Deck Security Door
1500 DY 5000 FC	1500 DY 5000 FC	53-588-00	Upper Cargo Compartment



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
1500 DY	1875 DY	20-280-00	PFCS Wire Shielding Functional Check - Empennage
1875 DY	1875 DY	20-270-01	PFCS Wire Shielding Functional Check - Left Wing
1875 DY	1875 DY	20-270-02	PFCS Wire Shielding Functional Check - Right Wing
2250 DY	2250 DY	20-260-00	Ram Air Turbine (RAT) Wire Shielding Functional Check
2250 DY	2250 DY	20-310-01	Functional Check Wire Bundle Inspection Left Flaps, Slats, Skew Sensors
2250 DY	2250 DY	20-310-02	Functional Check Wire Bundle Right Flaps, Slats, Skew Sensors
2250 DY	2250 DY	20-320-00	Gust Suppression Transducers Wire Shielding Functional Check
2250 DY	2250 DY	20-430-00	HIRF/Lightning Glide Slope Tracking Antenna COAX
2250 DY	2250 DY	20-451-00	HIRF/Lightning Radio Altimeter Antenna to Transceiver Coax
2250 DY	2250 DY	25-067-00	Off-Wing Slide Compartment Door Lock/Latch System
2250 DY	2250 DY	25-260-00	Overhead Crew/Attendant Rests Secondary Egress System
2250 DY	2250 DY	25-270-00	Overhead Crew/Attendant Rests Secondary Egress Grab Bar
2250 DY	2250 DY	26-064-00	Lower Lobe Attendant Rest (LLAR) Smoke Detection System
2250 DY	2250 DY	26-272-00	Lower Lobe Attendant Rest Fire Extinguishing System
2250 DY 12000 FC	2250 DY 12000 FC	28-015-00	Surge Tank Vent Flame Arrestor
2250 DY	2250 DY	35-060-00	Passenger Oxygen System Door Latch/Actuator
2250 DY	2250 DY	35-070-00	Passenger Chemical Oxygen Generators
2250 DY	2250 DY	35-071-00	Lavatory Constant Dispensing (CDS) oxygen System
2250 DY	2250 DY	35-090-00	Passenger Oxygen Masks
2250 DY	2250 DY	35-120-00	Passenger/ Supernumerary Gaseous Oxygen System Pressure Regulator
2250 DY	2250 DY	35-240-00	Supernumerary Cylinder Pressure Regulator
2250 DY	2250 DY	35-250-00	Supernumerary System Pressure Regulator
2250 DY	2250 DY	38-020-00	Potable Water Isolation Valves and Cables



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
2250 DY	2250 DY	52-150-00	Passenger Entry Door EPAS Tubing
2250 DY	2250 DY	52-150-01	Passenger Entry Door EPAS Tubing
2250 DY	2250 DY	52-150-02	Passenger Entry Door EPAS Tubing
2250 DY	2250 DY	52-155-00	No. 3 Over-Wing Doors EPAS Tubing
2250 DY	2250 DY	52-200-00	Forward Large Cargo Door Lock Handle Load Limiter
2250 DY	2250 DY	52-205-00	AFT Large Cargo Door Lock Handle Load Limiter
2625 DY	2625 DY	20-471-00	HIRF/Lightning Protection - Main Landing Gear (MLG) Selector/Bypass Valve Module
2625 DY	2625 DY	20-472-00	HIRF/Lightning Protection - Center Hydraulic System Quantity Transmitter
2625 DY	2625 DY	20-473-01	HIRF/Lightning Protection - Flight Control Shutoff Valves - LH Wing & LH MLG W/W
2625 DY	2625 DY	20-473-02	HIRF/Lightning Protection - Flight Control Shutoff Valves - RH Wing & RH MLG W/W
2625 DY	2625 DY	20-474-01	HIRF/Lightning Protection - Fuel Crossfeed and Isolation Valves - LH Wing & LH MLG W/W
2625 DY	2625 DY	20-474-02	HIRF/Lightning Protection - Fuel Crossfeed and Isolation Valves - RH Wing & RH MLG W/W
2625 DY	2625 DY	20-475-00	HIRF/Lightning Protection - Center Override Jettison Fuel Pumps - MLG W/W
2625 DY	2625 DY	20-476-01	HIRF/Lightning Protection - Fuel Boost Pumps - LH Wing & LH MLG W/W
2625 DY	2625 DY	20-476-02	HIRF/Lightning Protection - Fuel Boost Pumps - RH Wing & RH MLG W/W
2625 DY	2625 DY	20-477-01	HIRF/Lightning Protection - Main Tank Fuel Jettison Pump - LH Wing
2625 DY	2625 DY	20-477-02	HIRF/Lightning Protection - Main Tank Fuel Jettison Pump - RH Wing
2625 DY	2625 DY	20-478-01	HIRF/Lightning Protection - Fuel Jettison Nozzle Valves - LH Wing
2625 DY	2625 DY	20-478-02	HIRF/Lightning Protection - Fuel Jettison Nozzle Valves - RH Wing
2625 DY	2625 DY	20-479-01	HIRF/Lightning Protection - Fuel Jettison Nozzle Valves - LH Wing
2625 DY	2625 DY	20-479-02	HIRF/Lightning Protection - Fuel Jettison Nozzle Valves - RH Wing
2625 DY	2625 DY	28-023-00	Fuel Spar Valve Battery
3000 DY	1500 DY	20-340-00	HIRF/lightning ACE disconnects to pitch rate sensors
3000 DY	3000 DY	20-410-00	Radome Diverter Strips Detailed Visual Inspection



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
3000 DY	3000 DY	20-560-01	HIRF/ L Functional Test for FQIS, Left Side
3000 DY	3000 DY	20-560-02	HIRF/ L Functional Test for FQIS, Right Side
3000 DY	3000 DY	25-095-00	Overwing Exit Door Lifeline
3000 DY 10000 FC	3000 DY 10000 FC	52-554-00	Main Deck Cargo Door
3000 DY 10000 FC	3000 DY 10000 FC	53-517-00	Forward Cargo Compartment Lower Lobe
3000 DY 10000 FC	3000 DY 10000 FC	53-541-00	Aft Cargo Compartment
3000 DY 10000 FC	3000 DY 10000 FC	53-542-00	Bulk Cargo Compartment
3000 DY 8000 FC	3000 DY 8000 FC	53-626-00	Auxiliary Body Fuel Tanks
3000 DY 8000 FC	3000 DY 8000 FC	53-627-00	Auxiliary Body Fuel Tank Attach Fittings, Links and Pins
3000 DY 16000 FC	3000 DY 16000 FC	53-932-00	Upper Fuselage - Left and Right - Section 43
3375 DY	3375 DY	52-301-00	Flight Deck Door Strike Assembly
3750 DY	1875 DY	20-290-00	HIRF/Lightning Ace Wire Bundle Shielding
3750 DY	2250 DY	20-420-00	HIRF/Lightning Localizer Tracking, VOR/Localizer Antenna COAX
3750 DY	2250 DY	20-440-00	HIRF/Lightning VOR/Localizer Capture Antenna COAX
3750 DY	3750 DY	25-090-00	Flight Deck Escape Rope
3750 DY	3750 DY	26-250-00	Cargo Fire Extinguishing System Filter/Regulator
3750 DY	3750 DY	26-274-00	Lower Lobe Attendant Rest Fire Extinguishing System
3750 DY	3750 DY	27-380-00	Spoiler Auxiliary Retract Device (SARD) Operational Check
3750 DY	3750 DY	28-120-00	Out-of-Tank Wire Bundle Cushion Clamps and Teflon Sleeving
3750 DY	3750 DY	52-305-00	Flight Deck Door Decompression Panel Latches and Hinges
3750 DY	3750 DY	52-320-00	Flight Deck Door Decompression Panel Trim Ring Seals



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
4500 DY	1125 DY	33-076-00	Cabin ceiling lighting intensity
4500 DY 24000 FC	1500 DY 8000 FC	53-621-00	Aft Wing-To-Body Fairings
4500 DY	1875 DY	20-200-00	HIRF/L AFDC Task for ILS, RA, AIMS, Backdrive and Cross Channel
4500 DY	1875 DY	20-300-00	HIRF/Arlinc 629 Buses for Flight Controls, Couplers to EE Racks
4500 DY	1875 DY	20-400-00	HIRF/Lightning Glide Slope and Localizer Antenna Coax
4500 DY	4500 DY	20-445-00	Fin Tip Diverter Strip
4500 DY	4500 DY	20-470-00	HIRF/Lightning Protection - Air Supply Isolation Valves
4500 DY	4500 DY	25-085-00	Aux Fuel Tank Barrier Panel
4500 DY	4500 DY	28-011-00	Hydraulic Tube Spar Penetration (SFAR 88)
4500 DY	4500 DY	28-013-20	Pressure Relief Valve (SFAR 88)
4500 DY	4500 DY	28-013-30	Overfill Float Switch. (SFAR 88)
4500 DY	4500 DY	28-013-40	Vent Scoop Upper Duct (SFAR 88)
4500 DY	4500 DY	28-015-20	Scavenge Jet Pumps (SFAR 88)
4500 DY	4500 DY	28-021-10	In-tank Tubing and Equipment Static Ground Straps and Clamps (SFAR 88)
4500 DY	4500 DY	28-021-20	Fueling Shutoff Valve (SFAR 88)
4500 DY	4500 DY	28-021-30	Fueling Receptacle (SFAR 88)
4500 DY	4500 DY	28-022-30	Pump Housing (SFAR 88)
4500 DY	4500 DY	28-022-40	Boost, Center Tank Override/Jettison Pumps and Main Tank Jettison Pumps. (SFAR 88)
4500 DY	4500 DY	28-022-50	Motor Operated Valve (SFAR 88)
4500 DY	4500 DY	28-024-00	Transfer tube penetration (AUX TANK)
4500 DY	4500 DY	28-025-20	APU DC Fuel Pump (SFAR 88)
4500 DY	4500 DY	28-025-30	APU Fuel Shutoff Valve (SFAR 88)
4500 DY	4500 DY	28-025-40	APU Isolation Valve (SFAR 88)



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
4500 DY	4500 DY	28-026-10	Defuel Valve (SFAR 88)
4500 DY	4500 DY	28-031-20	Jettison Nozzle Valve (SFAR 88)
4500 DY	4500 DY	28-031-30	Jettison Isolation Valve (SFAR 88)
4500 DY	4500 DY	28-031-40	Jettison Nozzle Manifold (SFAR 88)
4500 DY	4500 DY	28-041-10	FQIS Wiring (SFAR 88)
4500 DY	4500 DY	28-041-20	FQIS Equipment (SFAR 88)
4500 DY	4500 DY	28-041-30	FQIS - Out Tank Wiring (SFAR 88)
5625 DY	1875 DY	20-330-00	HIRF/Lightning ACE Disconnects to Modal Suppression Transducers
5625 DY	1875 DY	20-460-00	HIRF/Lightning GPS Antenna to Left and Right MMR
6000 DY 20000 FC	6000 DY 20000 FC	52-552-00	Main Deck Cargo Door
ENG CNG	ENG CNG	54-501-01	Powerplant - Left
ENG CNG	ENG CNG	54-502-01	Powerplant - Left
ENG CNG	ENG CNG	54-504-02	Powerplant - Right
ENG CNG	ENG CNG	54-505-02	Powerplant - Right
ENG CNG	ENG CNG	54-530-01	Powerplant - Left
ENG CNG	ENG CNG	54-531-01	Powerplant - Left
ENG CNG	ENG CNG	54-533-02	Powerplant - Right
ENG CNG	ENG CNG	54-534-02	Powerplant - Right
ENG CNG	ENG CNG	54-560-01	Powerplant - Left
ENG CNG	ENG CNG	54-561-01	Powerplant - Left
ENG CNG	ENG CNG	54-563-02	Powerplant - Right
ENG CNG	ENG CNG	54-564-02	Powerplant - Right
ENG CNG	ENG CNG	71-205-01	Inspection of the Forward Mount



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
ENG CNG	ENG CNG	71-205-02	Inspection of the Forward Mount
ENG CNG	ENG CNG	71-210-01	Inspection of the Aft Lower Mount
ENG CNG	ENG CNG	71-210-02	Inspection of the Aft Lower Mount
ENG CNG	ENG CNG	71-350-01	Inspection of the Forward Mount
ENG CNG	ENG CNG	71-350-02	Inspection of the Forward Mount
ENG CNG	ENG CNG	71-355-01	Inspection of the AFT Engine Mount
ENG CNG	ENG CNG	71-355-02	Inspection of the AFT Engine Mount
ENG CNG	ENG CNG	72-025-01	Inspection of the forward Mount - Left
ENG CNG	ENG CNG	72-025-02	Inspection of the forward Mount - Right
ENG CNG	ENG CNG	72-280-01	Inspection of the Turbine Exhaust Case Rail Mount (AFT Eng Mount) - Left
ENG CNG	ENG CNG	72-280-02	Inspection of the Turbine Exhaust Case Rail Mount (AFT Eng Mount) - Right
ENG CNG	ENG CNG	72-370-01	Inspection of the Lugs
ENG CNG	ENG CNG	72-370-02	Inspection of the Lugs
ENG CNG	ENG CNG	78-005-01	Inspect General Visual Exhaust Sleeve/Center Body - Left
ENG CNG	ENG CNG	78-005-02	Inspect General Visual Exhaust Sleeve/Center Body - Right
50 FC 25 DY	50 FC 25 DY	12-081-00	Main Landing Gear Truck Beam and Inner Cylinder Pivot Joints
100 FC	100 FC	32-210-00	Brakes
150 FC 50 DY	150 FC 50 DY	12-082-00	Main Landing Gear Forward Trunnion Bearing Housing and Retract Arm Assembly
250 FC 125 DY	250 FC 125 DY	12-090-00	Forward Large Cargo Door Hinge Pins
250 FC 125 DY	250 FC 125 DY	12-092-00	Aft Large Cargo Door Hinge Pins
250 FC 125 DY	250 FC 125 DY	52-032-10	Main Deck Cargo Door hinge pin.



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
400 FC 187 DY	400 FC 187 DY	12-094-00	Forward Large Cargo Door Components and Door to Cutout Mating Surfaces
400 FC 187 DY	400 FC 187 DY	12-096-00	Aft Large Cargo Door Components and Door to Cutout Mating Surfaces
400 FC	400 FC	32-240-00	Tail Skid
400 FC 210 DY	400 FC 210 DY	52-032-40	Main Deck Cargo Door Latch Pins and Cam Latches
400 FC 150 DY	400 FC 150 DY	53-816-00	Forward Cargo Compartment
400 FC 375 DY	400 FC 375 DY	53-846-00	Aft Cargo Compartment
400 FC 375 DY	400 FC 375 DY	53-848-00	Aft Cargo Compartment
500 FC	500 FC	72-001-00	Engine Gas Path
700 FC 375 DY	700 FC 375 DY	52-520-01	Left #1 Entry Door
700 FC 375 DY	700 FC 375 DY	52-521-01	Left #2 Passenger Entry Door
700 FC 375 DY	700 FC 375 DY	52-522-01	Left #3 Overwing Door
700 FC 375 DY	700 FC 375 DY	52-523-01	Left #3 Passenger Entry Door
700 FC 375 DY	700 FC 375 DY	52-524-01	Left #4 Passenger Entry Door
700 FC 375 DY	700 FC 375 DY	52-525-01	Left #4 Passenger Entry Door
700 FC 375 DY	700 FC 375 DY	52-526-01	Left #5 Passenger Entry Door
700 FC 375 DY	700 FC 375 DY	52-535-02	Right #1 Entry Door
700 FC 375 DY	700 FC 375 DY	52-536-02	Right #2 Passenger Entry Door



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
700 FC 375 DY	700 FC 375 DY	52-537-02	Right #3 Overwing Door
700 FC 375 DY	700 FC 375 DY	52-538-02	Right #3 Passenger Entry Door
700 FC 375 DY	700 FC 375 DY	52-539-02	Right #4 Passenger Entry Door
700 FC 375 DY	700 FC 375 DY	52-540-02	Right #4 Passenger Entry Door
700 FC 375 DY	700 FC 375 DY	52-541-02	Right #5 Passenger Entry Door
700 FC 175 DY	700 FC 175 DY	53-836-00	Left Main Landing Gear Wheel Well - From the Ground
700 FC 175 DY	700 FC 175 DY	53-840-00	Right Main Landing Gear Wheel Well - From the Ground
800 FC 150 DY	800 FC 150 DY	12-070-00	Nose Landing Gear Steering and Actuating Components and Mechanisms
800 FC 150 DY	800 FC 150 DY	12-074-00	Nose Landing Gear Doors and Door Actuating Mechanisms
800 FC 150 DY	800 FC 150 DY	12-080-00	Main Landing Gear Components and Actuating Mechanisms
800 FC 150 DY	800 FC 150 DY	12-086-00	Main Landing Gear Doors and Actuating Mechanisms
800 FC 150 DY	800 FC 150 DY	12-088-00	Main Landing Gear Support Beam
800 FC	800 FC	32-260-00	Main Landing Gear Shock Strut Dimension "A"
1000 FC	500 FC	72-060-01	Borescope Inspection of the Combustor - Left
1000 FC	500 FC	72-060-02	Borescope Inspection of the Combustor - Right
1000 FC	500 FC	72-065-01	Borescope Inspection of the 1 St. & 2 ND. Stage Turbine Blades - Left
1000 FC	500 FC	72-065-02	Borescope Inspection of the 1 St. & 2 ND. Stage Turbine Blades - Right
1000 FC	500 FC	72-345-01	Fan Blade Ultrasonic Test



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
1000 FC	500 FC	72-345-02	Fan Blade Ultrasonic Test
1000 FC 240 DY	1000 FC 240 DY	12-034-00	Wing Trailing Edge Flap Transmissions, Ballscrews and Gimbals
1000 FC 240 DY	1000 FC 240 DY	12-050-00	Wing Trailing Edge Flap Supports and Support Mechanisms
1000 FC 375 DY	1000 FC 375 DY	52-501-00	Forward Large Cargo Door
1000 FC 375 DY	1000 FC 375 DY	52-506-00	Aft Small Cargo Door
1000 FC 375 DY	1000 FC 375 DY	52-507-00	Bulk Cargo Door
1000 FC 375 DY	1000 FC 375 DY	52-509-00	Aft Large Cargo Door
1000 FC 240 DY	1000 FC 240 DY	53-513-00	Area Below Forward Cargo Compartment
1000 FC 240 DY	1000 FC 240 DY	53-521-00	Aft Cargo Compartment
1000 FC 240 DY	1000 FC 240 DY	53-527-00	Area Below Aft Cargo Compartment
1000 FC 240 DY	1000 FC 240 DY	53-528-00	Area Below Aft Cargo Compartment
1000 FC 375 DY	1000 FC 375 DY	53-587-00	Main Deck Cargo Compartment
1000 FC 250 DY	1000 FC 250 DY	53-850-00	Aft Cargo Compartment Lower Lobe Attendant Rest
1000 FC 250 DY	1000 FC 250 DY	53-868-00	Bulk Cargo Compartment
1200 FC	1200 FC	72-005-01	Fan Blade Inspection - Left
1200 FC	1200 FC	72-005-02	Fan Blade Inspection - Right
1200 FC	1200 FC	72-030-01	General Visual Inspection of the Fan Area - Left
1200 FC	1200 FC	72-030-02	General Visual Inspection of the Fan Area - Right



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
1400 FC 375 DY	1400 FC 375 DY	32-800-00	Nose Landing Gear and Landing Gear Doors - From the Ground
1400 FC 375 DY	1400 FC 375 DY	32-804-01	Left Main Landing Gear and Landing Gear Doors - From the Ground
1400 FC 375 DY	1400 FC 375 DY	32-808-02	Right Main Landing Gear and Landing Gear Doors - From the Ground
1400 FC 375 DY	1400 FC 375 DY	53-808-00	Nose Gear Wheel Well - from the ground
1600 FC	1600 FC	32-250-00	Main Landing Gear Shock Strut Servicing
1600 FC	1600 FC	32-280-00	Nose Landing Gear Shock Strut Servicing
1600 FC	1600 FC	52-100-00	Passenger Entry Door Girt Bar Floor Fittings
1600 FC	1600 FC	52-100-01	Passenger Entry Door Girt Bar Floor Fittings
1600 FC	1600 FC	52-100-02	Passenger Entry Door Girt Bar Floor Fittings
2000 FC 480 DY	2000 FC 480 DY	53-535-00	Bulk Cargo Compartment
2000 FC 480 DY	2000 FC 480 DY	53-551-00	Passenger Compartment - Left
2000 FC 480 DY	2000 FC 480 DY	53-551-01	Supernumerary Cabin - Left
2000 FC 480 DY	2000 FC 480 DY	53-552-00	Passenger Compartment - Right
2000 FC 480 DY	2000 FC 480 DY	53-552-01	Supernumerary Cabin - Right
2000 FC 480 DY	2000 FC 480 DY	53-562-00	Passenger Compartment - Left
2000 FC 480 DY	2000 FC 480 DY	53-563-00	Passenger Compartment - Right
2000 FC 480 DY	2000 FC 480 DY	53-582-00	Passenger Compartment
2000 FC 480 DY	2000 FC 480 DY	53-583-00	Passenger Compartment



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
2000 FC 480 DY	2000 FC 480 DY	53-599-00	Passenger Compartment
2000 FC 480 DY	2000 FC 480 DY	53-601-00	Passenger Compartment
2000 FC 480 DY	2000 FC 480 DY	53-617-00	Passenger Compartment Left and Right
2000 FC	2000 FC	54-210-01	Left Forward Engine Strut Drain.
2000 FC	2000 FC	54-210-02	Right Forward Engine Strut Drain.
2400 FC 470 DY	2400 FC 470 DY	12-010-00	Wing Inboard Slat Main Tracks
2400 FC 470 DY	2400 FC 470 DY	12-012-00	Wing Outboard Slats Main Tracks
2400 FC 460 DY	2400 FC 460 DY	12-118-00	Wing Nacelle Attach Fittings
2400 FC 470 DY	2400 FC 470 DY	27-020-00	Slat Power Drive Unit and Slat Electric Motor
2400 FC 470 DY	2400 FC 470 DY	27-030-00	Left and Right Inboard and Outboard Leading Edge No-Back Brake Offset Gearbox
2400 FC 470 DY	2400 FC 470 DY	27-040-00	Flap Power Drive Unit and Flap Electric Motor
2400 FC 470 DY	2400 FC 470 DY	27-050-00	Left and Right Inboard and Outboard Flap Transmissions
2400 FC 470 DY	2400 FC 470 DY	27-060-00	Left and Right Flap Skewed Roller No-Back Brakes
2500 FC 750 DY	2500 FC 750 DY	53-640-00	Aft Cargo Compartment
2500 FC 750 DY	2500 FC 750 DY	53-641-00	Main Deck Cargo Compartment
4000 FC	4000 FC	25-055-00	Passenger Compartment Articulating Seats
4000 FC 1125 DY	4000 FC 1125 DY	52-015-00	No. 3 Over-Wing Door Seals and Vent Door Seals



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
4000 FC 1125 DY	4000 FC 1125 DY	53-509-00	Forward Cargo Compartment
4000 FC 1125 DY	4000 FC 1125 DY	53-522-00	Aft Cargo Compartment
4000 FC 1125 DY	4000 FC 1125 DY	53-523-00	Aft Cargo Compartment
4000 FC 1125 DY	4000 FC 1125 DY	53-529-00	Area Below Aft Cargo Compartment
4000 FC 1125 DY	4000 FC 1125 DY	53-530-00	Area Below Aft Cargo Compartment
4000 FC 1125 DY	4000 FC 1125 DY	53-907-00	Overhead Flight Crew Rest (OFCR) Compartment
4000 FC 1125 DY	4000 FC 1125 DY	53-919-00	Overhead Flight Attendant Rest (OFAR) Compartment(s)
4000 FC 1125 DY	4000 FC 1125 DY	54-005-01	Left Strut AFT Upper Spar Drain and AFT Strut Fairing Drain
4000 FC 1125 DY	4000 FC 1125 DY	54-005-02	Right Strut AFT Upper Spar Drain and AFT Strut Fairing Drain
4000 FC 1500 DY	4000 FC 1500 DY	54-802-01	Forward Strut Fairing - Left Nacelle Strut
4000 FC 750 DY	4000 FC 750 DY	54-804-01	Forward and Aft Torque Box - Left Nacelle Strut
4000 FC 750 DY	4000 FC 750 DY	54-806-01	Forward and Aft Torque Box - Left Nacelle Strut
4000 FC 750 DY	4000 FC 750 DY	54-808-01	Aft Strut Fairing - Left Nacelle Strut
4000 FC 1500 DY	4000 FC 1500 DY	54-812-02	Forward Strut Fairing - Right Nacelle Strut
4000 FC 750 DY	4000 FC 750 DY	54-814-02	Forward and Aft Torque Box - Right Nacelle Strut
4000 FC 750 DY	4000 FC 750 DY	54-816-02	Forward and Aft Torque Box - Right Nacelle Strut



INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
4000 FC 750 DY	4000 FC 750 DY	54-818-02	Aft Strut Fairing - Right Nacelle Strut
4000 FC 750 DY	4000 FC 750 DY	54-848-01	Aft Strut Fairing - Left Nacelle Strut
4000 FC 750 DY	4000 FC 750 DY	54-858-02	Aft Strut Fairing - Right Nacelle Strut
4800 FC 940 DY	4800 FC 940 DY	12-014-00	Leading Edge Slat Track Rollers and Pinion Bearings
5000 FC	5000 FC	27-305-00	Stabilizer Trim Actuator - Karon Lined Bushings
5000 FC 1500 DY	5000 FC 1500 DY	53-637-00	Main Deck Cargo Compartment
5000 FC 1500 DY	5000 FC 1500 DY	53-639-00	Main Deck Cargo Compartment
5000 FC 1500 DY	5000 FC 1500 DY	53-645-00	Aft Cargo Compartment
5000 FC 1500 DY	5000 FC 1500 DY	53-647-00	Main Deck Cargo Compartment
5500 FC 2250 DY	5500 FC 2250 DY	54-350-01	Left Strut AFT Upper Spar Drain and AFT Strut Fairing Drain
5500 FC 2250 DY	5500 FC 2250 DY	54-350-02	Right Strut AFT Upper Spar Drain and AFT Strut Fairing Drain
6000 FC 1125 DY	6000 FC 1125 DY	12-008-00	LE Slat Torque Tube Couplings, Supports and Gearbox Couplings
6000 FC 1125 DY	6000 FC 1125 DY	12-008-01	Forward Cargo Compartment Torque Tube Supports and Couplings
6000 FC 1125 DY	6000 FC 1125 DY	12-018-00	Wing Krueger Flap Drive Arm Bearing
6000 FC 1125 DY	6000 FC 1125 DY	12-030-00	Wing Trailing Edge Torque Tubes, Torque Tube Supports, and Couplings
6000 FC 1125 DY	6000 FC 1125 DY	12-106-00	Passenger Entry Door Mechanisms



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
6000 FC 1125 DY	6000 FC 1125 DY	12-108-00	Bulk Cargo Door Probe Support Fittings
6000 FC 1125 DY	6000 FC 1125 DY	12-110-00	Forward Access Door Latch Pin
6000 FC 1125 DY	6000 FC 1125 DY	12-112-00	Main Equipment Center Access Door Latch Pin
6000 FC 1125 DY	6000 FC 1125 DY	20-642-00	Forward Bulkhead Left Main Landing Gear Wheel Well
6000 FC 1125 DY	6000 FC 1125 DY	20-644-00	Forward Bulkhead Right Main Landing Gear Wheel Well
6000 FC 1125 DY	6000 FC 1125 DY	20-800-00	Engine IDG and Backup Generator Power Feeders - Left Engine
6000 FC 1125 DY	6000 FC 1125 DY	20-802-00	Engine IDG and Backup Generator Power Feeders - Right Engine
6000 FC	6000 FC	27-460-00	TRAILING EDGE FLAP SUPPORT LINKAGE PIN FREEPLAY
6000 FC 1125 DY	6000 FC 1125 DY	32-320-00	Nose Landing Gear Mechanisms
6000 FC 2250 DY	6000 FC 2250 DY	32-330-00	Nose Landing Gear Door Mechanisms
6000 FC 1125 DY	6000 FC 1125 DY	32-802-00	Nose Landing Gear and Landing Gear Doors
6000 FC 1125 DY	6000 FC 1125 DY	32-806-01	Left Main Landing Gear and Landing Gear Doors
6000 FC 1125 DY	6000 FC 1125 DY	32-810-02	Right Main Landing Gear and Landing Gear Doors
6000 FC 1125 DY	6000 FC 1125 DY	52-009-00	Main Deck Cargo Door seals.
6000 FC 1125 DY	6000 FC 1125 DY	52-009-10	Main Deck Cargo vent door seal
6000 FC 1125 DY	6000 FC 1125 DY	52-010-00	Passenger Entry Door Seals and Vent Door Seals



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
6000 FC 1125 DY	6000 FC 1125 DY	52-020-00	Forward Large Cargo Door Seals and Vent Door Seals
6000 FC 1125 DY	6000 FC 1125 DY	52-025-00	AFT Large Cargo Door Seals and Vent Door Seals
6000 FC 1125 DY	6000 FC 1125 DY	52-030-00	AFT Small Cargo Door Seals and Vent Door Seals
6000 FC 1125 DY	6000 FC 1125 DY	52-032-00	Main Deck Cargo Door mechanism.
6000 FC 1125 DY	6000 FC 1125 DY	52-032-20	Manual drive mechanism of Main Deck Cargo Door.
6000 FC	6000 FC	52-032-30	Lock control switches.
6000 FC 750 DY	6000 FC 750 DY	52-040-00	Bulk Cargo Door Seals
6000 FC 1125 DY	6000 FC 1125 DY	52-050-00	Forward Access Door Seal
6000 FC 1125 DY	6000 FC 1125 DY	52-060-00	Main Equipment Center Door Seals
6000 FC 1500 DY	6000 FC 1500 DY	52-120-00	Passenger Entry Door Flight Lock Mechanism
6000 FC 1500 DY	6000 FC 1500 DY	52-120-01	Passenger Entry Door Flight Lock Mechanism
6000 FC 1500 DY	6000 FC 1500 DY	52-120-02	Passenger Entry Door Flight Lock Mechanism
6000 FC 1500 DY	6000 FC 1500 DY	52-125-00	No. 3 Over-Wing Door Flight Lock Mechanism
6000 FC 1125 DY	6000 FC 1125 DY	52-130-00	Passenger Entry Door Girt Bar Mechanism Interlock
6000 FC 1125 DY	6000 FC 1125 DY	52-130-01	Passenger Entry Door Girt Bar Mechanism Interlock
6000 FC 1125 DY	6000 FC 1125 DY	52-130-02	Passenger Entry Door Girt Bar Mechanism Interlock



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
6000 FC 2250 DY	6000 FC 2250 DY	52-135-00	No. 3 Over-Wing Door Latch Torque Tube Interlock
6000 FC 1125 DY	6000 FC 1125 DY	52-170-00	Passenger Entry Door Mechanisms
6000 FC 1125 DY	6000 FC 1125 DY	52-170-01	Passenger Entry Door Mechanisms
6000 FC 1125 DY	6000 FC 1125 DY	52-170-02	Passenger Entry Door Mechanisms
6000 FC 1125 DY	6000 FC 1125 DY	52-175-00	No. 3 Over-Wing Door Mechanisms
6000 FC 1125 DY	6000 FC 1125 DY	52-180-00	Forward Large Cargo Door Manual Drive Mechanism & Lift PDU Brake
6000 FC 1125 DY	6000 FC 1125 DY	52-185-00	AFT Large Cargo Door Manual Drive Mechanism & Lift PDU Brake
6000 FC 1125 DY	6000 FC 1125 DY	52-210-00	Forward Large Cargo Door Ditching Interlock Mechanism
6000 FC 1125 DY	6000 FC 1125 DY	52-215-00	AFT Large Cargo Door Ditching Interlock Mechanism
6000 FC 1125 DY	6000 FC 1125 DY	52-220-00	AFT Small Cargo Door Hinge Power Drive Unit and Manual Drive Mechanism
6000 FC 1125 DY	6000 FC 1125 DY	52-240-00	Bulk Cargo Door Latch Mechanism
6000 FC 1125 DY	6000 FC 1125 DY	52-260-00	Passenger Entry Door Closed Proximity Sensors
6000 FC 1125 DY	6000 FC 1125 DY	52-265-00	No. 3 Over-Wing Doors Closed Proximity Sensors
6000 FC 1125 DY	6000 FC 1125 DY	52-502-00	Forward Large Cargo Door
6000 FC 1125 DY	6000 FC 1125 DY	52-510-00	Aft Large Cargo Door
6000 FC 1125 DY	6000 FC 1125 DY	52-802-00	Forward Large Cargo Door



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
6000 FC 1125 DY	6000 FC 1125 DY	52-806-00	Aft Small Cargo Door
6000 FC 1125 DY	6000 FC 1125 DY	52-810-00	Aft Large Cargo Door
6000 FC 1125 DY	6000 FC 1125 DY	52-814-00	Bulk Cargo Door
6000 FC 1125 DY	6000 FC 1125 DY	52-816-01	Left No. 1 Passenger/Crew Entry Door - Section 41
6000 FC 1125 DY	6000 FC 1125 DY	52-820-01	Left No. 2 Passenger Entry Door - Section 43
6000 FC 1125 DY	6000 FC 1125 DY	52-824-01	Left No. 3 Overwing Door - Section 44
6000 FC 1125 DY	6000 FC 1125 DY	52-826-01	Left No. 3 Passenger Entry Door - Section 46
6000 FC 1125 DY	6000 FC 1125 DY	52-827-01	Left No. 4 Passenger Entry Door - Section 46
6000 FC 1125 DY	6000 FC 1125 DY	52-830-01	Left No. 4 Passenger Entry Door - Section 47
6000 FC 1125 DY	6000 FC 1125 DY	52-831-01	Left No. 5 Passenger Entry Door - Section 47
6000 FC 1125 DY	6000 FC 1125 DY	52-834-02	Right No. 1 Passenger/Crew Entry Door - Section 41
6000 FC 1125 DY	6000 FC 1125 DY	52-840-02	Right No. 2 Passenger Entry Door - Section 43
6000 FC 1125 DY	6000 FC 1125 DY	52-844-02	Right No. 3 Overwing Door - Section 44
6000 FC 1125 DY	6000 FC 1125 DY	52-848-02	Right No. 3 Passenger Entry Door - Section 46
6000 FC 1125 DY	6000 FC 1125 DY	52-849-02	Right No. 4 Passenger Entry Door - Section 46
6000 FC 1125 DY	6000 FC 1125 DY	52-852-02	Right No. 4 Passenger Entry Door - Section 47



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
6000 FC 1125 DY	6000 FC 1125 DY	52-853-02	Right No. 5 Passenger Entry Door - Section 47
6000 FC 1125 DY	6000 FC 1125 DY	52-856-00	Main Deck Cargo Door
6000 FC 1125 DY	6000 FC 1125 DY	52-858-00	Main Deck Cargo Door
6000 FC 1125 DY	6000 FC 1125 DY	53-509-01	Forward Cargo Compartment
6000 FC 1125 DY	6000 FC 1125 DY	53-518-00	Main Landing Gear Wheel Well, Left
6000 FC 1125 DY	6000 FC 1125 DY	53-519-00	Main Landing Gear Wheel Well, Right
6000 FC 1125 DY	6000 FC 1125 DY	53-522-01	Aft Cargo Compartment
6000 FC 1125 DY	6000 FC 1125 DY	53-523-01	Aft Cargo Compartment
6000 FC 1125 DY	6000 FC 1125 DY	53-529-01	Area Below Aft Cargo Compartment
6000 FC 1125 DY	6000 FC 1125 DY	53-530-01	Area Below Aft Cargo Compartment
6000 FC 1125 DY	6000 FC 1125 DY	53-553-00	Passenger Compartment - Left
6000 FC 1125 DY	6000 FC 1125 DY	53-553-01	Supernumerary Cabin - Left
6000 FC 1125 DY	6000 FC 1125 DY	53-554-00	Passenger Compartment - Right
6000 FC 1125 DY	6000 FC 1125 DY	53-554-01	Supernumerary Cabin - Right
6000 FC 1125 DY	6000 FC 1125 DY	53-564-00	Passenger Compartment - Left
6000 FC 1125 DY	6000 FC 1125 DY	53-565-00	Passenger Compartment - Right



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
6000 FC 1125 DY	6000 FC 1125 DY	53-584-00	Passenger Compartment
6000 FC 1125 DY	6000 FC 1125 DY	53-585-00	Passenger Compartment
6000 FC 1125 DY	6000 FC 1125 DY	53-586-00	Passenger Compartment
6000 FC 1125 DY	6000 FC 1125 DY	53-586-01	Main Deck Cargo Compartment
6000 FC 1125 DY	6000 FC 1125 DY	53-602-00	Passenger Compartment
6000 FC 1125 DY	6000 FC 1125 DY	53-603-00	Passenger Compartment
6000 FC 1125 DY	6000 FC 1125 DY	53-611-00	Area above Wing Center Section
6000 FC 1125 DY	6000 FC 1125 DY	53-614-00	Passenger Compartment
6000 FC 1125 DY	6000 FC 1125 DY	53-800-00	Fuselage Lower Half
6000 FC 1125 DY	6000 FC 1125 DY	53-804-00	Radome
6000 FC 1125 DY	6000 FC 1125 DY	53-806-00	Area Forward of Nose Landing Gear Wheel Well
6000 FC 1125 DY	6000 FC 1125 DY	53-810-00	Nose Gear Wheel Well (Inspection Accomplished from Within Wheel Well)
6000 FC 1125 DY	6000 FC 1125 DY	53-812-00	Area Above and Outboard of the Nose Landing Gear Wheel Well
6000 FC 1125 DY	6000 FC 1125 DY	53-814-00	Main Equipment Center
6000 FC 1125 DY	6000 FC 1125 DY	53-838-00	Left Main Landing Gear Wheel Well (Inspection accomplished within WW)
6000 FC 1125 DY	6000 FC 1125 DY	53-842-00	Right Main Landing Gear Wheel Well (Inspection accomplished Within WW)



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
6000 FC 1125 DY	6000 FC 1125 DY	53-876-00	Area Aft of the Bulk Cargo Compartment
6000 FC 1125 DY	6000 FC 1125 DY	53-898-00	Upper Fuselage - Flight Compartment - BS 92.5 to 246
6000 FC 1125 DY	6000 FC 1125 DY	53-900-00	Flight Compartment
6000 FC 1125 DY	6000 FC 1125 DY	53-904-00	Passenger Compartment - Section 41
6000 FC 1125 DY	6000 FC 1125 DY	53-908-00	Passenger Compartment - Section 43
6000 FC 1125 DY	6000 FC 1125 DY	53-912-00	Passenger Compartment - Section 44
6000 FC 1125 DY	6000 FC 1125 DY	53-916-00	Passenger Compartment - Section 46
6000 FC 1125 DY	6000 FC 1125 DY	53-920-00	Passenger Compartment - Section 47
6000 FC 1125 DY	6000 FC 1125 DY	53-926-00	Fuselage Area Aft of Bulkhead - Inspection Accomplished within Fuselage
6000 FC 1125 DY	6000 FC 1125 DY	53-936-00	Supernumerary Cabin - Left and Right
6000 FC 1125 DY	6000 FC 1125 DY	53-938-00	Main Deck Cargo Compartment - Section 41, 43, 44, 46, 47 - Left And Right Sides - BS STA 388 To Aft Pressure Bulkhead
6000 FC 1500 DY	6000 FC 1500 DY	54-822-01	Forward Strut Fairing - Left Nacelle Strut
6000 FC 1125 DY	6000 FC 1125 DY	54-824-01	Forward and Aft Torque Box - Left Nacelle Strut - Cowls Opened
6000 FC 1125 DY	6000 FC 1125 DY	54-826-01	Forward and Aft Torque Box - Left Nacelle Strut
6000 FC 1125 DY	6000 FC 1125 DY	54-828-01	Aft Strut Fairing - Left Nacelle Strut
6000 FC 1500 DY	6000 FC 1500 DY	54-832-02	Forward Strut Fairing - Right Nacelle Strut



INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
6000 FC 1125 DY	6000 FC 1125 DY	54-834-02	Forward and Aft Torque Box - Right Nacelle Strut - Fan Cowls Opened
6000 FC 1125 DY	6000 FC 1125 DY	54-836-02	Forward and Aft Torque Box - Right Nacelle Strut
6000 FC 1125 DY	6000 FC 1125 DY	54-838-02	Aft Strut Fairing - Right Nacelle Strut
6000 FC 1125 DY	6000 FC 1125 DY	54-844-01	Forward and Aft Torque Box - Left Nacelle Strut - Cowls Opened
6000 FC 1125 DY	6000 FC 1125 DY	54-854-02	Forward and Aft Torque Box - Right Nacelle Strut - Fan Cowls Opened
6000 FC 1125 DY	6000 FC 1125 DY	55-501-00	Horizontal Stabilizer Center Section
6000 FC 1125 DY	6000 FC 1125 DY	55-804-00	Vertical Stabilizer Leading Edge
6000 FC 1125 DY	6000 FC 1125 DY	55-812-00	Vertical Stabilizer - Front Spar to Rear Spar - Between Ribs 8 and 9
6000 FC 1125 DY	6000 FC 1125 DY	55-814-00	Vertical Stabilizer - Rear Spar to Trailing Edge
6000 FC 1125 DY	6000 FC 1125 DY	55-816-00	Vertical Stabilizer - Rear Spar to Trailing Edge
6000 FC 1125 DY	6000 FC 1125 DY	55-817-00	Vertical Stabilizer - Rear Spar to Trailing Edge
6000 FC 1125 DY	6000 FC 1125 DY	55-820-00	Rudder
6000 FC 1125 DY	6000 FC 1125 DY	55-822-00	Rudder Tab
6000 FC 1125 DY	6000 FC 1125 DY	55-824-00	Vertical Stabilizer Forward Tip
6000 FC 1125 DY	6000 FC 1125 DY	55-830-01	Left Horizontal Stabilizer - Leading Edge
6000 FC 1125 DY	6000 FC 1125 DY	55-836-01	Left Horizontal Stabilizer - Front Spar to Rear Spar



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
6000 FC 1125 DY	6000 FC 1125 DY	55-838-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
6000 FC 1125 DY	6000 FC 1125 DY	55-838-03	Left Horizontal Stabilizer - Front Spar to Rear Spar
6000 FC 1125 DY	6000 FC 1125 DY	55-840-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
6000 FC 1125 DY	6000 FC 1125 DY	55-841-00	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
6000 FC 1125 DY	6000 FC 1125 DY	55-844-01	Left Elevator
6000 FC 1125 DY	6000 FC 1125 DY	55-846-01	Left Horizontal Stabilizer Tip
6000 FC 1125 DY	6000 FC 1125 DY	55-850-02	Right Horizontal Stabilizer - Leading Edge
6000 FC 1125 DY	6000 FC 1125 DY	55-856-02	Right Horizontal Stabilizer - Front Spar to Rear Spar
6000 FC 1125 DY	6000 FC 1125 DY	55-856-04	Right Horizontal Stabilizer - Front Spar to Rear Spar
6000 FC 1125 DY	6000 FC 1125 DY	55-858-02	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
6000 FC 1125 DY	6000 FC 1125 DY	55-860-02	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
6000 FC 1125 DY	6000 FC 1125 DY	55-861-00	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
6000 FC 1125 DY	6000 FC 1125 DY	55-864-02	Right Elevator
6000 FC 1125 DY	6000 FC 1125 DY	55-866-02	Right Horizontal Stabilizer Tip
6000 FC 1125 DY	6000 FC 1125 DY	56-010-00	Flight Deck #2 Windows MICROSWITCH
6000 FC 1125 DY	6000 FC 1125 DY	57-502-01	Slat Number 7



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
6000 FC 1125 DY	6000 FC 1125 DY	57-504-01	Slats Number 1 Through 6
6000 FC 1125 DY	6000 FC 1125 DY	57-535-02	Slat Number 8
6000 FC 1125 DY	6000 FC 1125 DY	57-538-02	Slats Number 9 Through 14
6000 FC 1125 DY	6000 FC 1125 DY	57-804-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Left Wing
6000 FC 1125 DY	6000 FC 1125 DY	57-806-01	Leading Edge to Front Spar - Inboard of Nacelle Strut - Left Wing
6000 FC 1125 DY	6000 FC 1125 DY	57-808-01	Slat No. 7
6000 FC 1125 DY	6000 FC 1125 DY	57-810-01	Krueger Seal Flap/Nacelle Gap Cover Area - Left Wing
6000 FC 1125 DY	6000 FC 1125 DY	57-812-01	Krueger Seal Flap/Nacelle Gap Cover Area - Left Wing
6000 FC 1125 DY	6000 FC 1125 DY	57-814-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Left Wing
6000 FC 1125 DY	6000 FC 1125 DY	57-816-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Left Wing
6000 FC 1125 DY	6000 FC 1125 DY	57-817-01	Leading Edge to Front Spar - Outboard of Nacelle Strut - Left Wing
6000 FC 1125 DY	6000 FC 1125 DY	57-818-01	Left Wing Outboard Leading Edge Slats Number 1 through 6
6000 FC 1125 DY	6000 FC 1125 DY	57-836-01	Left Wing Dry Bay
6000 FC 1125 DY	6000 FC 1125 DY	57-848-01	Left Wing Tip
6000 FC 1125 DY	6000 FC 1125 DY	57-852-01	Left Wing Fixed T.E. - Aft of Rear Spar, Inbd of Outbd Support Fairing
6000 FC 1125 DY	6000 FC 1125 DY	57-854-01	Rear Spar to Landing Gear Support Beam - Left Wing



INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
6000 FC 1125 DY	6000 FC 1125 DY	57-856-01	Landing Gear Support Beam and Rear Spar to Trailing Edge - Left Wing
6000 FC 1125 DY	6000 FC 1125 DY	57-858-01	Inboard Spoilers Numbers 6 and 7
6000 FC 1125 DY	6000 FC 1125 DY	57-860-01	Inboard Trailing Edge Flaps - Left Wing
6000 FC 1125 DY	6000 FC 1125 DY	57-862-01	Left Wing Flaperon
6000 FC 1125 DY	6000 FC 1125 DY	57-864-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Left Wing
6000 FC 1125 DY	6000 FC 1125 DY	57-866-01	Rear Spar to Trailing Edge - Outboard of Flaperon - Left Wing
6000 FC 1125 DY	6000 FC 1125 DY	57-868-01	Outboard Spoilers Numbers 1 through 5
6000 FC 1125 DY	6000 FC 1125 DY	57-870-01	Left Wing Outboard Flap
6000 FC 1125 DY	6000 FC 1125 DY	57-872-01	Left Wing Aileron
6000 FC 1125 DY	6000 FC 1125 DY	57-874-01	Flap Support Fairing No. 4
6000 FC 1125 DY	6000 FC 1125 DY	57-878-01	Inboard Flap Center Track Fairing - Left Wing
6000 FC 1125 DY	6000 FC 1125 DY	57-880-01	Flap Support Fairing No. 3 and Inboard Flaperon Support Fairing
6000 FC 1125 DY	6000 FC 1125 DY	57-884-01	Outboard Flaperon Support Fairing - Left Wing
6000 FC 1125 DY	6000 FC 1125 DY	57-886-01	Flap Support Fairing No. 2
6000 FC 1125 DY	6000 FC 1125 DY	57-890-01	Flap Support Fairing No. 1
6000 FC 1125 DY	6000 FC 1125 DY	57-894-01	Outboard Auxiliary Support Fairing - Left Wing



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
6000 FC 1125 DY	6000 FC 1125 DY	57-896-02	Leading Edge to Front Spar - Inboard of Nacelle Strut - Right Wing
6000 FC 1125 DY	6000 FC 1125 DY	57-898-02	Leading Edge to Front Spar - Inboard of Nacelle Strut - Right Wing
6000 FC 1125 DY	6000 FC 1125 DY	57-900-02	Slat No. 8
6000 FC 1125 DY	6000 FC 1125 DY	57-902-02	Krueger Seal Flap/Nacelle Gap Cover Area - Right Wing
6000 FC 1125 DY	6000 FC 1125 DY	57-904-02	Krueger Seal Flap/Nacelle Gap Cover Area - Right Wing
6000 FC 1125 DY	6000 FC 1125 DY	57-906-02	Leading Edge to Front Spar - Outboard of Nacelle Strut - Right Wing
6000 FC 1125 DY	6000 FC 1125 DY	57-908-02	Leading Edge to Front Spar - Outboard of Nacelle Strut - Right Wing
6000 FC 1125 DY	6000 FC 1125 DY	57-909-02	Leading Edge to Front Spar - Outboard of Nacelle Strut - Right Wing
6000 FC 1125 DY	6000 FC 1125 DY	57-910-02	Outboard Leading Edge Slats Number 9 through 14
6000 FC 1125 DY	6000 FC 1125 DY	57-928-02	Right Wing Dry Bay
6000 FC 1125 DY	6000 FC 1125 DY	57-940-02	Right Wing Tip
6000 FC 1125 DY	6000 FC 1125 DY	57-944-02	Right Wing Fixed T.E. - Aft of Rear Spar, Inbd of Outbd Support Fairing
6000 FC 1125 DY	6000 FC 1125 DY	57-946-02	Rear Spar to Landing Gear Support Beam - Right Wing
6000 FC 1125 DY	6000 FC 1125 DY	57-948-02	Landing Gear Support Beam and Rear Spar to Trailing Edge - Right Wing
6000 FC 1125 DY	6000 FC 1125 DY	57-950-02	Inboard Spoilers Numbers 8 and 9
6000 FC 1125 DY	6000 FC 1125 DY	57-952-02	Inboard Trailing Edge Flaps - Right Wing



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
6000 FC 1125 DY	6000 FC 1125 DY	57-954-02	Right Wing Flaperon
6000 FC 1125 DY	6000 FC 1125 DY	57-956-02	Rear Spar to Trailing Edge - Outboard of Flaperon - Right Wing
6000 FC 1125 DY	6000 FC 1125 DY	57-958-02	Rear Spar to Trailing Edge - Outboard of Flaperon - Right Wing
6000 FC 1125 DY	6000 FC 1125 DY	57-960-02	Outboard Spoilers Numbers 10 through 14
6000 FC 1125 DY	6000 FC 1125 DY	57-962-02	Right Wing Outboard Flap
6000 FC 1125 DY	6000 FC 1125 DY	57-964-02	Right Wing Aileron
6000 FC 1125 DY	6000 FC 1125 DY	57-966-02	Flap Support Fairing No. 5
6000 FC 1125 DY	6000 FC 1125 DY	57-970-02	Inboard Flap Center Track Fairing - Right Wing
6000 FC 1125 DY	6000 FC 1125 DY	57-972-02	Flap Support Fairing No. 6 and Inbd Flaperon Support Fairing
6000 FC 1125 DY	6000 FC 1125 DY	57-976-02	Outboard Flaperon Support Fairing - Right Wing
6000 FC 1125 DY	6000 FC 1125 DY	57-978-02	Flap Support Fairing No. 7
6000 FC 1125 DY	6000 FC 1125 DY	57-982-02	Flap Support Fairing No. 8
6000 FC 1125 DY	6000 FC 1125 DY	57-986-02	Outboard Auxiliary Support Fairing - Right Wing
6000 FC 1125 DY	6000 FC 1125 DY	78-385-01	Thrust Reverser Thermal Protection System
6000 FC 1125 DY	6000 FC 1125 DY	78-385-02	Thrust Reverser Thermal Protection System
8000 FC 1500 DY	8000 FC 1500 DY	20-648-00	Forward Cargo Power Drive Unit Wire Bundles



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
8000 FC 1500 DY	8000 FC 1500 DY	20-650-00	Areas Behind the FWD Cargo Compartment Sidewalls
8000 FC 1500 DY	8000 FC 1500 DY	20-658-00	Area Behind the Forward Cargo Compartment
8000 FC 1500 DY	8000 FC 1500 DY	20-665-00	Aft Cargo Power Drive Unit Wire Bundles
8000 FC 1500 DY	8000 FC 1500 DY	20-700-00	Areas Behind the Passenger Compartment Air Grilles
8000 FC 1500 DY	8000 FC 1500 DY	20-704-00	Wiring Behind Passenger Compartment Air Grilles
8000 FC 1500 DY	8000 FC 1500 DY	20-716-00	Area Around the Video Control Center
8000 FC 1500 DY	8000 FC 1500 DY	20-734-00	External Power Receptacle in the Main Equipment Center.
8000 FC 1500 DY	8000 FC 1500 DY	20-738-00	Areas Behind the Passenger Compartment Air Grilles
8000 FC 1500 DY	8000 FC 1500 DY	20-742-00	Areas Behind the Passenger Compartment Air Grilles
8000 FC 1500 DY	8000 FC 1500 DY	20-746-00	Wiring Behind Passenger Compartment Air Grilles
8000 FC 1500 DY	8000 FC 1500 DY	20-750-00	Wiring Behind Passenger Compartment Air Grilles
8000 FC 1500 DY	8000 FC 1500 DY	20-754-00	Areas Behind the Passenger Compartment Air Grilles
8000 FC 1500 DY	8000 FC 1500 DY	20-758-00	Wiring Behind Passenger Compartment Air Grilles
8000 FC 1500 DY	8000 FC 1500 DY	20-762-00	Areas Behind the Passenger Compartment Air Grilles
8000 FC 1500 DY	8000 FC 1500 DY	20-766-00	Areas Behind the Passenger Compartment Air Grilles
8000 FC 1500 DY	8000 FC 1500 DY	20-770-00	Wiring Behind Passenger Compartment Air Grilles



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
8000 FC 1500 DY	8000 FC 1500 DY	20-774-00	Wiring Behind Passenger Compartment Air Grilles
8000 FC 1500 DY	8000 FC 1500 DY	20-778-00	Areas Behind the Passenger Compartment Air Grilles
8000 FC 1500 DY	8000 FC 1500 DY	20-782-00	Wiring Behind Passenger Compartment Air Grilles
8000 FC 1500 DY	8000 FC 1500 DY	20-794-00	APU and APU Starter Power Feeders
8000 FC 1500 DY	8000 FC 1500 DY	53-832-00	Forward Keel Beam
8000 FC 1500 DY	8000 FC 1500 DY	53-844-00	Aft Keel Beam
8000 FC 1500 DY	8000 FC 1500 DY	53-852-00	Aft Cargo Compartment
8000 FC 1500 DY	8000 FC 1500 DY	53-880-00	Forward Wing-To-Body Fairings - Left
8000 FC 1500 DY	8000 FC 1500 DY	53-882-00	Forward Wing-To-Body Fairings - Right
8000 FC 1500 DY	8000 FC 1500 DY	53-884-00	Overwing Wing-To-Body Fairing - Left
8000 FC 1500 DY	8000 FC 1500 DY	53-886-00	Overwing Wing-To-Body Fairings - Right
8000 FC 1500 DY	8000 FC 1500 DY	53-934-00	Area Above Supernumerary Cabin - Left and Right
8000 FC 1500 DY	8000 FC 1500 DY	53-937-00	Area Above Main Deck Cargo Compartment Ceiling - Left and Right Sides - BS STA 388 to Aft Pressure Bulkhead
8000 FC 4500 DY	8000 FC 4500 DY	54-205-01	Left Strut AFT Upper Spar Drain and AFT Strut Fairing Drain
8000 FC 4500 DY	8000 FC 4500 DY	54-205-02	Right Strut AFT Upper Spar Drain and AFT Strut Fairing Drain
8000 FC 1500 DY	8000 FC 1500 DY	54-842-01	Forward Strut Fairing - Left Nacelle Strut



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
8000 FC 2250 DY	8000 FC 2250 DY	54-846-01	Forward and Aft Torque Box - Left Nacelle Strut
8000 FC 1500 DY	8000 FC 1500 DY	54-852-02	Forward Strut Fairing - Right Nacelle Strut
8000 FC 2250 DY	8000 FC 2250 DY	54-856-02	Forward and Aft Torque Box - Right Nacelle Strut
8000 FC 2250 DY	8000 FC 1500 DY	55-800-00	Stabilizer Torsion Box Compartment - Left and Right Sides (Internal of Fuselage)
8000 FC 2250 DY	8000 FC 2250 DY	57-505-01	Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17
8000 FC 2250 DY	8000 FC 2250 DY	57-507-01	Wing Inspar Area (Fuel Tanks) - Rib 17 to Wing Tip
8000 FC	8000 FC	57-512-00	Slats Number 1 Through 6 Cove Skin
8000 FC	8000 FC	57-539-00	Slats Number 9 Through 14 Cove Skin
8000 FC 2250 DY	8000 FC 2250 DY	57-540-02	Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17
8000 FC 2250 DY	8000 FC 2250 DY	57-542-02	Wing Inspar Area (Fuel Tanks) - Rib 17 to Wing Tip
8000 FC 1500 DY	8000 FC 1500 DY	57-630-00	Area Above Wing Center Section
8000 FC 1500 DY	8000 FC 1500 DY	57-876-01	Flap Support Fairing No. 4
8000 FC 1500 DY	8000 FC 1500 DY	57-882-01	Flap Support Fairing No. 3 and Inboard Flaperon Support Fairing
8000 FC 1500 DY	8000 FC 1500 DY	57-888-01	Flap Support Fairing No. 2
8000 FC 1500 DY	8000 FC 1500 DY	57-892-01	Flap Support Fairing No. 1
8000 FC 1500 DY	8000 FC 1500 DY	57-968-02	Flap Support Fairing No. 5
8000 FC 1500 DY	8000 FC 1500 DY	57-974-02	Flap Support Fairing No. 6 and Inbd Flaperon Support Fairing



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
8000 FC 1500 DY	8000 FC 1500 DY	57-980-02	Flap Support Fairing No. 7
8000 FC 1500 DY	8000 FC 1500 DY	57-984-02	Flap Support Fairing No. 8
10000 FC 3000 DY	5000 FC 1500 DY	53-520-01	Area Above Main Landing Gear Wheel Well
10000 FC 3000 DY	10000 FC 3000 DY	53-628-00	Area Above Main Landing Gear Wheel Well
10000 FC 3000 DY	10000 FC 3000 DY	53-629-00	Supernumerary Area
10000 FC 3000 DY	10000 FC 3000 DY	53-633-00	Main Deck Cargo Compartment
10000 FC 3000 DY	10000 FC 3000 DY	53-634-00	Main Deck Cargo Compartment
10000 FC 3000 DY	10000 FC 3000 DY	53-635-00	Main Deck Cargo Compartment
10000 FC 3000 DY	10000 FC 3000 DY	53-646-00	Main Deck Cargo Compartment
10000 FC 3000 DY	10000 FC 3000 DY	53-648-00	Area Above Main Deck Cargo Compartment
10000 FC 3000 DY	20000 FC 6000 DY	53-631-00	Main Deck Cargo Compartment
11000 FC 2250 DY	11000 FC 2250 DY	32-300-00	Main Landing Gear Mechanisms
11000 FC 2250 DY	11000 FC 2250 DY	32-310-00	Main Landing Gear Door Mechanisms
12000 FC 2250 DY	8000 FC 1500 DY	53-888-00	Underwing Wing-to-Body Fairings - Left
12000 FC 2250 DY	8000 FC 1500 DY	53-890-00	Underwing Wing-To-Body Fairings - Right
12000 FC 2250 DY	8000 FC 1500 DY	53-906-00	Area Above Passenger Compartment Ceiling - Section 41



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
12000 FC 2250 DY	8000 FC 1500 DY	53-910-00	Area Above Passenger Compartment Ceiling - Section 43
12000 FC 2250 DY	8000 FC 1500 DY	53-914-00	Area Above Passenger Compartment - Section 44
12000 FC 2250 DY	8000 FC 1500 DY	53-918-00	Area Above Passenger Compartment Ceiling - Section 46
12000 FC 2250 DY	8000 FC 1500 DY	53-922-00	Area Above Passenger Compartment Ceiling - Section 47
12000 FC 2250 DY	12000 FC 2250 DY	20-651-00	Areas Below the AFT Cargo Compartment
12000 FC 2250 DY	12000 FC 2250 DY	20-664-00	Areas Behind the Aft Cargo Compartment Sidewalls
12000 FC 2250 DY	12000 FC 2250 DY	20-668-00	APU Battery Installation and Power Feeders
12000 FC 2250 DY	12000 FC 2250 DY	20-670-00	Area Behind the Bulk Cargo Compartment Sidewalls
12000 FC 2250 DY	12000 FC 2250 DY	20-840-01	IDG and Backup Power Feeders - Left Wing
12000 FC 2250 DY	12000 FC 2250 DY	20-840-02	IDG and Backup Power Feeders - Right Wing
12000 FC 2250 DY	12000 FC 2250 DY	20-842-00	EWIS within Nacelle Gap - Left and Right Wings
12000 FC 2250 DY	12000 FC 2250 DY	20-844-00	IDG and Backup Power Feeders - Right and Left Wings
12000 FC 2250 DY	12000 FC 2250 DY	21-250-00	E/E Equipment Cooling Override Duct
12000 FC 2250 DY	12000 FC 2250 DY	24-200-00	External Power Receptacles (Wear Check)
12000 FC 2250 DY	12000 FC 2250 DY	24-210-00	External Power Receptacles (Inspection)
12000 FC 2250 DY	12000 FC 2250 DY	53-532-00	Area Below Aft Cargo Compartment



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
12000 FC 2250 DY	12000 FC 2250 DY	53-532-01	Area Below Aft Cargo Compartment
12000 FC 2250 DY	12000 FC 2250 DY	53-533-00	Area Below Aft Cargo Compartment
12000 FC 2250 DY	12000 FC 2250 DY	53-533-01	Area Below Aft Cargo Compartment
12000 FC 2250 DY	12000 FC 2250 DY	53-574-00	Area Above Main Deck Compartment Ceiling
28000 FC 5250 DY	4000 FC 750 DY		
12000 FC 2250 DY	12000 FC 2250 DY	53-579-00	Area Above Main Deck Compartment Ceiling
28000 FC 5250 DY	4000 FC 750 DY		
12000 FC 2250 DY	12000 FC 2250 DY	53-595-00	Area above Main Deck Compartment Ceiling
12000 FC 2250 DY	12000 FC 2250 DY	53-596-00	Area above Main Deck Compartment Ceiling
28000 FC 5250 DY	4000 FC 750 DY		
12000 FC 2250 DY	12000 FC 2250 DY	53-818-00	Forward Cargo Compartment
12000 FC 2250 DY	12000 FC 2250 DY	53-822-00	Area Below Forward Cargo Compartment
12000 FC 2250 DY	12000 FC 2250 DY	53-826-00	Area Aft of Forward Cargo Compartment
12000 FC 2250 DY	12000 FC 2250 DY	53-830-00	Environmental Control Systems Bay
12000 FC 2250 DY	12000 FC 2250 DY	53-852-01	Aft Cargo Compartment
12000 FC 2250 DY	12000 FC 2250 DY	53-854-00	Aft Cargo Compartment
12000 FC 2250 DY	12000 FC 2250 DY	53-864-00	Area Below Aft Cargo Compartment



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
12000 FC 2250 DY	12000 FC 2250 DY	53-866-00	Area Below Aft Cargo Compartment
12000 FC 2250 DY	12000 FC 2250 DY	53-870-00	Bulk Cargo Compartment
12000 FC 2250 DY	12000 FC 2250 DY	53-874-00	Area Below Bulk Cargo Compartment
12000 FC 2250 DY	12000 FC 2250 DY	53-892-00	Aft Wing-to-Body Fairings - Left
12000 FC 2250 DY	12000 FC 2250 DY	53-894-00	Aft Wing-To-Body Fairings - Right
12000 FC 2250 DY	12000 FC 2250 DY	53-896-00	Upper Fuselage - Left and Right - Section 41 through 47 - BS 246 to BS 2150
12000 FC 2250 DY	12000 FC 2250 DY	53-924-00	Body Section 48 - BS 2150 to BS 2570
12000 FC 2250 DY	12000 FC 2250 DY	54-509-01	Forward Torque Box - Left Nacelle Strut
12000 FC 2250 DY	12000 FC 2250 DY	54-510-01	Forward Torque Box - Left Nacelle Strut
12000 FC 2250 DY	12000 FC 2250 DY	54-511-01	AFT Torque Box - Left Nacelle Strut
12000 FC 2250 DY	12000 FC 2250 DY	54-512-01	AFT Torque Box - Left Nacelle Strut
12000 FC 2250 DY	12000 FC 2250 DY	54-513-01	Strut Forward Torque Box
12000 FC 2250 DY	12000 FC 2250 DY	54-514-01	AFT Torque Box - Left Nacelle Strut
12000 FC 2250 DY	12000 FC 2250 DY	54-517-02	Forward Torque Box - Right Nacelle Strut
12000 FC 2250 DY	12000 FC 2250 DY	54-518-02	Forward Torque Box - Right Nacelle Strut
12000 FC 2250 DY	12000 FC 2250 DY	54-519-02	AFT Torque Box - Right Nacelle Strut



INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
12000 FC 2250 DY	12000 FC 2250 DY	54-520-02	AFT Torque Box - Right Nacelle Strut
12000 FC 2250 DY	12000 FC 2250 DY	54-521-02	Strut Forward Torque Box
12000 FC 2250 DY	12000 FC 2250 DY	54-522-02	AFT Torque Box - Right Nacelle Strut
12000 FC 2250 DY	12000 FC 2250 DY	54-538-01	Forward Torque Box - Left Nacelle Strut
12000 FC 2250 DY	12000 FC 2250 DY	54-539-01	Forward Torque Box - Left Nacelle Strut
12000 FC 2250 DY	12000 FC 2250 DY	54-540-01	AFT Torque Box - Left Nacelle Strut
12000 FC 2250 DY	12000 FC 2250 DY	54-541-01	AFT Torque Box - Left Nacelle Strut
12000 FC 2250 DY	12000 FC 2250 DY	54-542-01	Strut Forward Torque Box
12000 FC 2250 DY	12000 FC 2250 DY	54-543-01	AFT Torque Box - Left Nacelle Strut
12000 FC 2250 DY	12000 FC 2250 DY	54-546-02	Forward Torque Box - Right Nacelle Strut
12000 FC 2250 DY	12000 FC 2250 DY	54-547-02	Forward Torque Box - Right Nacelle Strut
12000 FC 2250 DY	12000 FC 2250 DY	54-548-02	AFT Torque Box - Right Nacelle Strut
12000 FC 2250 DY	12000 FC 2250 DY	54-549-02	AFT Torque Box - Right Nacelle Strut
12000 FC 2250 DY	12000 FC 2250 DY	54-550-02	Strut Forward Torque Box
12000 FC 2250 DY	12000 FC 2250 DY	54-551-02	AFT Torque Box - Right Nacelle Strut
12000 FC 2250 DY	12000 FC 2250 DY	54-568-01	Forward Torque Box - Left Nacelle Strut



INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
12000 FC 2250 DY	12000 FC 2250 DY	54-569-01	Forward Torque Box - Left Nacelle Strut
12000 FC 2250 DY	12000 FC 2250 DY	54-570-01	Aft Torque Box - Left Nacelle Strut
12000 FC 2250 DY	12000 FC 2250 DY	54-571-01	Aft Torque Box - Left Nacelle Strut
12000 FC 2250 DY	12000 FC 2250 DY	54-572-01	Strut Forward - Left Torque Box
12000 FC 2250 DY	12000 FC 2250 DY	54-573-01	Aft Torque Box - Left Nacelle Strut
12000 FC 2250 DY	12000 FC 2250 DY	54-576-02	Forward Torque Box - Right Nacelle Strut
12000 FC 2250 DY	12000 FC 2250 DY	54-577-02	Forward Torque Box - Right Nacelle Strut
12000 FC 2250 DY	12000 FC 2250 DY	54-578-02	Aft Torque Box - Right Nacelle Strut
12000 FC 2250 DY	12000 FC 2250 DY	54-579-02	Aft Torque Box - Right Nacelle Strut
12000 FC 2250 DY	12000 FC 2250 DY	54-580-02	Strut Forward - Right Torque Box
12000 FC 2250 DY	12000 FC 2250 DY	54-581-02	Aft Torque Box - Right Nacelle Strut
12000 FC 2250 DY	12000 FC 2250 DY	54-582-01	Forward Torque Box - Left Nacelle Strut
12000 FC 2250 DY	12000 FC 2250 DY	54-583-02	Forward Torque Box - Right Nacelle Strut
12000 FC 2250 DY	12000 FC 2250 DY	55-502-00	Horizontal Stabilizer Center Section
12000 FC 2250 DY	12000 FC 2250 DY	55-509-00	Vertical Stabilizer - Auxiliary Spar to Front Spar
12000 FC 2250 DY	12000 FC 2250 DY	55-511-00	Vertical Stabilizer - Front Spar to Rear Spar



INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
12000 FC 2250 DY	12000 FC 2250 DY	55-515-00	Vertical Stabilizer - Rear Spar to Trailing Edge
12000 FC 2250 DY	12000 FC 2250 DY	55-515-01	Vertical Stabilizer - Rear Spar to Trailing Edge
12000 FC 2250 DY	12000 FC 2250 DY	55-517-00	Vertical Stabilizer - Rear Spar to Trailing Edge
12000 FC 2250 DY	12000 FC 2250 DY	55-517-01	Vertical Stabilizer - Rear Spar to Trailing Edge
12000 FC 2250 DY	12000 FC 2250 DY	55-518-00	Vertical Stabilizer - Rear Spar to Trailing Edge
12000 FC 2250 DY	12000 FC 2250 DY	55-518-01	Vertical Stabilizer - Rear Spar to Trailing Edge
12000 FC 2250 DY	12000 FC 2250 DY	55-521-00	Rudder Tab
12000 FC 2250 DY	12000 FC 2250 DY	55-522-00	Rudder Tab
12000 FC 2250 DY	12000 FC 2250 DY	55-527-01	Left Horizontal Stabilizer Center Section
12000 FC 2250 DY	12000 FC 2250 DY	55-534-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
12000 FC 2250 DY	12000 FC 2250 DY	55-534-03	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
12000 FC 2250 DY	12000 FC 2250 DY	55-535-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
12000 FC 2250 DY	12000 FC 2250 DY	55-535-03	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
12000 FC 2250 DY	12000 FC 2250 DY	55-538-02	Right Horizontal Stabilizer Center Section
12000 FC 2250 DY	12000 FC 2250 DY	55-545-02	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
12000 FC 2250 DY	12000 FC 2250 DY	55-545-04	Right Horizontal Stabilizer - Rear Spar to Trailing Edge



INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
12000 FC 2250 DY	12000 FC 2250 DY	55-546-02	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
12000 FC 2250 DY	12000 FC 2250 DY	55-546-04	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
12000 FC 2250 DY	12000 FC 2250 DY	55-808-00	Vertical Stabilizer - Auxiliary Spar to Rear Spar
12000 FC 2250 DY	12000 FC 2250 DY	55-828-01	Left Horizontal Stabilizer - Center Section
12000 FC 2250 DY	12000 FC 2250 DY	55-832-01	Left Horizontal Stabilizer - Auxiliary Spar to Rear Spar
12000 FC 2250 DY	12000 FC 2250 DY	55-848-02	Right Horizontal Stabilizer Center Section
12000 FC 2250 DY	12000 FC 2250 DY	55-852-02	Right Horizontal Stabilizer - Auxiliary Spar to Rear Spar
12000 FC 2250 DY	12000 FC 2250 DY	57-501-00	Wing Center Section
12000 FC 2250 DY	12000 FC 2250 DY	57-515-01	Left Wing Inboard Main Flap
12000 FC 2250 DY	12000 FC 2250 DY	57-519-01	Left Wing Flaperon
12000 FC 2250 DY	12000 FC 2250 DY	57-520-01	Left Wing Flaperon
12000 FC 2250 DY	12000 FC 2250 DY	57-533-01	Outboard Flaperon Support Fairing - Left Wing
12000 FC 2250 DY	12000 FC 2250 DY	57-550-02	Right Wing Inboard Main Flap
12000 FC 2250 DY	12000 FC 2250 DY	57-554-02	Right Wing Flaperon
12000 FC 2250 DY	12000 FC 2250 DY	57-555-02	Right Wing Flaperon
12000 FC 2250 DY	12000 FC 2250 DY	57-563-02	Outboard Flaperon Support Fairing - Right Wing



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
12000 FC 2250 DY	12000 FC 2250 DY	57-832-01	Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17 - Left Wing
12000 FC 2250 DY	12000 FC 2250 DY	57-840-01	Wing Inspar Area (Fuel Tanks) - Rib 17 to Wing Tip - Left Wing
12000 FC 2250 DY	12000 FC 2250 DY	57-924-02	Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17 - Right Wing
12000 FC 2250 DY	12000 FC 2250 DY	57-932-02	Wing Inspar Area (Fuel Tanks) - Rib 17 to Wing Tip - Right Wing
16000 FC 4500 DY	0 FC 0 DY	53-557-00	Main Deck Compartment
16000 FC 4500 DY	0 FC 0 DY	53-558-00	Main Deck Compartment
16000 FC 3000 DY	0 FC 0 DY	53-568-00	Passenger Compartment - Left
16000 FC 3000 DY	0 FC 0 DY	53-568-01	Main Deck Cargo Compartment - Left
16000 FC 3000 DY	0 FC 0 DY	53-569-00	Passenger Compartment - Right
16000 FC 3000 DY	0 FC 0 DY	53-569-01	Main Deck Cargo Compartment - Right
16000 FC 3000 DY	0 FC 0 DY	53-576-00	Area Above Main Deck Compartment Ceiling
16000 FC 3000 DY	0 FC 0 DY	53-577-00	Main Deck Compartment
16000 FC 3000 DY	0 FC 0 DY	53-578-00	Main Deck Compartment
16000 FC 4500 DY	0 FC 0 DY	53-580-00	Area Above Main Deck Compartment Ceiling
16000 FC 4500 DY	0 FC 0 DY	53-589-00	Passenger Compartment
16000 FC 4500 DY	0 FC 0 DY	53-590-00	Passenger Compartment



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
16000 FC 3000 DY	0 FC 0 DY	53-591-00	Passenger Compartment
16000 FC 3000 DY	0 FC 0 DY	53-591-01	Main Deck Cargo Compartment
16000 FC 3000 DY	0 FC 0 DY	53-597-00	Area above Main Deck Compartment Ceiling
16000 FC 4500 DY	0 FC 0 DY	53-606-00	Passenger Compartment
16000 FC 4500 DY	0 FC 0 DY	53-607-00	Passenger Compartment
16000 FC 3000 DY	0 FC 0 DY	53-615-00	Passenger Compartment Left and Right
16000 FC 3000 DY	0 FC 0 DY	53-619-00	Area above Passenger Compartment Ceiling
16000 FC 3000 DY	0 FC 0 DY	53-623-00	Main Deck Compartment Ceiling
16000 FC	0 FC	55-528-03	Left Horizontal Stabilizer Center Section
16000 FC	0 FC	55-539-04	Right Horizontal Stabilizer Center Section
16000 FC 4500 DY	8000 FC 1500 DY	53-508-00	Main Equipment Center
16000 FC 4500 DY	8000 FC 1500 DY	53-520-00	Area Above Main Landing Gear Wheel Well
16000 FC 4500 DY	8000 FC 1500 DY	53-546-01	Overwing Wing-To-Body Fairings - Left
16000 FC 4500 DY	8000 FC 1500 DY	53-546-02	Overwing Wing-To-Body Fairings - Right
16000 FC 2250 DY	16000 FC 2250 DY	12-100-00	Forward Large Cargo Door Mechanisms (Pushrods, Links, Hooks and Pins)
16000 FC 2250 DY	16000 FC 2250 DY	12-102-00	Aft Large Cargo Door Mechanisms (Pushrods, Links, Hooks and Pins)
16000 FC 2250 DY	16000 FC 2250 DY	12-104-00	Aft Small Cargo Door Hinge Arms, Adjustment Rods and Latch Rollers



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
16000 FC 3000 DY	16000 FC 3000 DY	20-600-00	Power Feeders connected to P100 and P200 Power Panels
16000 FC 3000 DY	16000 FC 3000 DY	20-602-00	Area Above Nose Landing Gear Wheel Well
16000 FC 3000 DY	16000 FC 3000 DY	20-652-00	Forward Cargo Compartment Power Feeders
16000 FC 3000 DY	16000 FC 3000 DY	20-654-00	Areas Behind the FWD Cargo Compartment Sidewalls
16000 FC 3000 DY	16000 FC 3000 DY	20-656-00	Areas Below the FWD Cargo Compartment
16000 FC 3000 DY	16000 FC 3000 DY	20-659-00	Area Behind the Forward Cargo Compartment
16000 FC 3000 DY	16000 FC 3000 DY	20-660-00	Aft Cargo Compartment Power Feeders
16000 FC 3000 DY	16000 FC 3000 DY	20-662-00	Areas Behind the Aft Cargo Compartment Sidewalls
16000 FC 3000 DY	16000 FC 3000 DY	20-701-00	Areas Behind the Passenger Compartment Air Grilles
16000 FC 3000 DY	16000 FC 3000 DY	20-702-00	APU and RAT Power Feeders, and Galley and Cabin Power Feeders
16000 FC 3000 DY	16000 FC 3000 DY	20-705-00	Wiring Behind Passenger Compartment Air Grilles
16000 FC 3000 DY	16000 FC 3000 DY	20-708-00	Upper Surface of Ceiling Panels, Bins and Modules
16000 FC 3000 DY	16000 FC 3000 DY	20-712-00	Flight Deck EWIS
16000 FC 3000 DY	16000 FC 3000 DY	20-714-00	Flight Deck
16000 FC 3000 DY	16000 FC 3000 DY	20-724-00	Rat Cabin and Galley Power Feeders in the Passenger Compartment
16000 FC 3000 DY	16000 FC 3000 DY	20-730-00	Equipment Racks in Main Equipment Center.



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
16000 FC 3000 DY	16000 FC 3000 DY	20-732-00	APU, IDG, BAT. & CHGR and Ground Power Feeders in the Main Equipment Center
16000 FC 3000 DY	16000 FC 3000 DY	20-736-00	APU Power Feeders in Main Deck Cargo Compartment
16000 FC 3000 DY	16000 FC 3000 DY	20-737-00	Main Deck Cargo Compartment Air Grilles
16000 FC 3000 DY	16000 FC 3000 DY	20-740-00	Areas Behind the Passenger Compartment Air Grilles
16000 FC 3000 DY	16000 FC 3000 DY	20-744-00	Areas Behind the Passenger Compartment Air Grilles
16000 FC 3000 DY	16000 FC 3000 DY	20-748-00	Wiring Behind Passenger Compartment Air Grilles
16000 FC 3000 DY	16000 FC 3000 DY	20-752-00	Wiring Behind Passenger Compartment Air Grilles
16000 FC 3000 DY	16000 FC 3000 DY	20-756-00	Areas Behind the Passenger Compartment Air Grilles
16000 FC 3000 DY	16000 FC 3000 DY	20-760-00	Wiring Behind Passenger Compartment Air Grilles
16000 FC 3000 DY	16000 FC 3000 DY	20-764-00	Areas Behind the Passenger Compartment Air Grilles
16000 FC 3000 DY	16000 FC 3000 DY	20-768-00	Areas Behind the Passenger Compartment Air Grilles
16000 FC 3000 DY	16000 FC 3000 DY	20-772-00	Wiring Behind Passenger Compartment Air Grilles
16000 FC 3000 DY	16000 FC 3000 DY	20-776-00	Wiring Behind Passenger Compartment Air Grilles
16000 FC 3000 DY	16000 FC 3000 DY	20-780-00	Areas Behind the Passenger Compartment Air Grilles
16000 FC 3000 DY	16000 FC 3000 DY	20-784-00	Wiring Behind Passenger Compartment Air Grilles
16000 FC 3000 DY	16000 FC 3000 DY	20-790-00	APU and APU Starter Power Feeders



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
16000 FC 3000 DY	16000 FC 3000 DY	20-792-00	APU and APU Starter Power Feeders
16000 FC 3000 DY	16000 FC 3000 DY	20-850-00	Wing Leading Edge Wiring - Left Wing
16000 FC 3000 DY	16000 FC 3000 DY	20-851-00	Wing Leading Edge Wiring - Right Wing
16000 FC 3000 DY	16000 FC 3000 DY	20-852-00	FQIS Wiring in the Wing Main Tank
16000 FC 3750 DY	16000 FC 3750 DY	25-290-00	Tip Alarm System (TAS)
16000 FC 3000 DY	16000 FC 3000 DY	27-290-00	Stabilizer Ballscrew Safety Rod
16000 FC 3000 DY	16000 FC 3000 DY	27-300-00	Stabilizer Trim Actuator Gimbals
16000 FC	16000 FC	27-460-01	TRAILING EDGE FLAP SUPPORT LINKAGE PIN FREEPLAY
16000 FC 3000 DY	16000 FC 3000 DY	28-111-00	External Wires Over Center Fuel Tank (28-AWL-01)
16000 FC 3000 DY	16000 FC 3000 DY	28-113-00	External Wires Over the Auxiliary Fuel Tank
16000 FC 10 YR	16000 FC 10 YR	32-220-00	Main Landing Gear
16000 FC 10 YR	16000 FC 10 YR	32-230-00	Nose Landing Gear
16000 FC 2250 DY	16000 FC 2250 DY	52-140-00	Passenger Entry Door Mode Select Mechanism and Cables
16000 FC 2250 DY	16000 FC 2250 DY	52-140-01	Passenger Entry Door Mode Select Mechanism and Cables
16000 FC 2250 DY	16000 FC 2250 DY	52-140-02	Passenger Entry Door Mode Select Mechanism and Cables
16000 FC 2250 DY	16000 FC 2250 DY	52-145-00	No. 3 Over-Wing Doors Mode Select Mechanism and Pull Cable



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
16000 FC 2250 DY	16000 FC 2250 DY	52-190-00	Forward Large Cargo Door Rotary Actuator No-Back
16000 FC 2250 DY	16000 FC 2250 DY	52-195-00	AFT Large Cargo Door Rotary Actuator No-Back
16000 FC 2250 DY	16000 FC 2250 DY	52-230-00	AFT Small Cargo Door Rotary Actuator
16000 FC 3750 DY	16000 FC 3000 DY	52-503-00	Forward Large Cargo Door
16000 FC 3750 DY	16000 FC 3000 DY	52-508-00	Bulk Cargo Door
16000 FC 4500 DY	16000 FC 3000 DY	52-511-00	Aft Large Cargo Door
16000 FC 2250 DY	16000 FC 2250 DY	52-804-00	Forward Large Cargo Door
16000 FC 2250 DY	16000 FC 2250 DY	52-808-00	Aft Small Cargo Door
16000 FC 2250 DY	16000 FC 2250 DY	52-812-00	Aft Large Cargo Door
16000 FC 2250 DY	16000 FC 2250 DY	52-818-01	Left No. 1 Passenger/Crew Entry Door - Section 41
16000 FC 2250 DY	16000 FC 2250 DY	52-822-01	Left No. 2 Passenger Entry Door - Section 43
16000 FC 2250 DY	16000 FC 2250 DY	52-825-01	Left No. 3 Overwing Door - Section 44
16000 FC 2250 DY	16000 FC 2250 DY	52-828-01	Left No. 3 Passenger Entry Door - Section 46
16000 FC 2250 DY	16000 FC 2250 DY	52-829-01	Left No. 4 Passenger Entry Door - Section 46
16000 FC 2250 DY	16000 FC 2250 DY	52-832-01	Left No. 4 Passenger Entry Door - Section 47
16000 FC 2250 DY	16000 FC 2250 DY	52-833-01	Left No. 5 Passenger Entry Door - Section 47



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
16000 FC 2250 DY	16000 FC 2250 DY	52-836-02	Right No. 1 Passenger/Crew Entry Door - Section 41
16000 FC 2250 DY	16000 FC 2250 DY	52-842-02	Right No. 2 Passenger Entry Door - Section 43
16000 FC 2250 DY	16000 FC 2250 DY	52-846-02	Right No. 3 Overwing Door - Section 44
16000 FC 2250 DY	16000 FC 2250 DY	52-850-02	Right No. 3 Passenger Entry Door - Section 46
16000 FC 2250 DY	16000 FC 2250 DY	52-851-02	Right No. 4 Passenger Entry Door - Section 46
16000 FC 2250 DY	16000 FC 2250 DY	52-854-02	Right No. 4 Passenger Entry Door - Section 47
16000 FC 2250 DY	16000 FC 2250 DY	52-855-02	Right No. 5 Passenger Entry Door - Section 47
16000 FC 3000 DY	16000 FC 3000 DY	53-501-00	Area Forward of Nose Landing Gear Wheel Well and Forward Access Door
16000 FC 3000 DY	16000 FC 3000 DY	53-502-00	Area Outboard and Above Nose Landing Gear Wheel Well
16000 FC 4500 DY	16000 FC 3000 DY	53-503-00	Left Area Outboard and Above Nose Landing Gear Wheel Well
16000 FC 4500 DY	16000 FC 3000 DY	53-504-00	Right Area Outboard and Above Nose Landing Gear Wheel Well
16000 FC 3000 DY	16000 FC 3000 DY	53-505-00	Main Equipment Center and Main Equipment Center Access Door
16000 FC 4500 DY	16000 FC 3000 DY	53-506-00	Main Equipment Center
16000 FC 4500 DY	16000 FC 3000 DY	53-507-00	Main Equipment Center
16000 FC 4500 DY	16000 FC 3000 DY	53-511-00	Forward Cargo Compartment
16000 FC 3000 DY	16000 FC 3000 DY	53-512-00	Forward Cargo Compartment



INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
16000 FC 3000 DY	16000 FC 3000 DY	53-512-01	Forward Cargo Compartment
16000 FC 3000 DY	16000 FC 3000 DY	53-514-00	Area Below Forward Cargo Compartment
16000 FC 3000 DY	16000 FC 3000 DY	53-515-00	Area Below Forward Cargo Compartment
16000 FC 3000 DY	16000 FC 3000 DY	53-516-00	Area Aft of Forward Cargo Compartment - Body Station 998 to 1035
16000 FC 3000 DY	16000 FC 3000 DY	53-516-01	Area Aft of Forward Cargo Compartment - Body Station 998 to 1035
16000 FC 4500 DY	16000 FC 3000 DY	53-524-00	Aft Cargo Compartment
16000 FC 3000 DY	16000 FC 3000 DY	53-525-00	Aft Cargo Compartment
16000 FC 3000 DY	16000 FC 3000 DY	53-526-00	Aft Cargo Compartment
16000 FC 3000 DY	16000 FC 3000 DY	53-526-01	Aft Cargo Compartment
16000 FC 3000 DY	16000 FC 3000 DY	53-534-00	Area Below Aft Cargo Compartment
16000 FC 4500 DY	16000 FC 3000 DY	53-536-00	Bulk Cargo Compartment
16000 FC 3000 DY	16000 FC 3000 DY	53-537-00	Bulk Cargo Compartment
16000 FC 3000 DY	16000 FC 3000 DY	53-537-01	Bulk Cargo Compartment
16000 FC 3000 DY	16000 FC 3000 DY	53-538-00	Area Below Bulk Cargo Compartment
16000 FC 4500 DY	16000 FC 3000 DY	53-539-00	Area Aft of Bulk Cargo Compartment
16000 FC 4500 DY	16000 FC 3000 DY	53-540-00	Area Aft of Bulk Cargo Compartment



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
16000 FC 4500 DY	16000 FC 3000 DY	53-548-00	Flight Compartment
16000 FC 4500 DY	16000 FC 3000 DY	53-549-00	Flight Compartment
16000 FC 4500 DY	16000 FC 3000 DY	53-559-00	Main Deck Compartment
16000 FC 4500 DY	16000 FC 3000 DY	53-560-00	Main Deck Compartment
16000 FC 4500 DY	16000 FC 3000 DY	53-570-00	Passenger Compartment - Left
16000 FC 4500 DY	16000 FC 3000 DY	53-571-00	Passenger Compartment - Right
16000 FC 4500 DY	16000 FC 3000 DY	53-592-00	Passenger Compartment
16000 FC 4500 DY	16000 FC 3000 DY	53-593-00	Passenger Compartment
16000 FC 3000 DY	16000 FC 3000 DY	53-594-00	Passenger Compartment
16000 FC 3000 DY	16000 FC 3000 DY	53-594-01	Main Deck Cargo Compartment
16000 FC 4500 DY	16000 FC 3000 DY	53-608-00	Passenger Compartment
16000 FC 4500 DY	16000 FC 3000 DY	53-609-00	Passenger Compartment
16000 FC 3000 DY	16000 FC 3000 DY	53-610-00	Area above Wing Center Section
16000 FC 3000 DY	16000 FC 3000 DY	53-616-00	Passenger Compartment Left and Right
16000 FC 3000 DY	16000 FC 3000 DY	53-673-00	Underwing Wing-To-Body Fairing
16000 FC 3375 DY	16000 FC 3000 DY	53-820-00	Forward Cargo Compartment



INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
16000 FC 3000 DY	16000 FC 3000 DY	53-824-00	Area Below Forward Cargo Compartment
16000 FC 3375 DY	16000 FC 3000 DY	53-828-00	Area Above Wing Center Section
16000 FC 3000 DY	16000 FC 3000 DY	53-834-00	Area Above Main Landing Gear Wheel Well
16000 FC 3000 DY	16000 FC 3000 DY	53-856-00	Aft Cargo Compartment
16000 FC 3000 DY	16000 FC 3000 DY	53-858-00	Aft Cargo Compartment
16000 FC 3000 DY	16000 FC 3000 DY	53-860-00	Area Below Aft Cargo Compartment
16000 FC 3000 DY	16000 FC 3000 DY	53-862-00	Area Below Aft Cargo Compartment
16000 FC 3000 DY	16000 FC 3000 DY	53-872-00	Bulk Cargo Compartment
16000 FC 3000 DY	16000 FC 3000 DY	53-878-00	Area Aft of the Bulk Cargo Compartment
16000 FC 3000 DY	16000 FC 3000 DY	53-902-00	Flight Compartment
16000 FC 3000 DY	16000 FC 3000 DY	55-503-00	Area Aft of Bulkhead
16000 FC 4500 DY	16000 FC 3000 DY	55-504-00	Area Aft of Bulkhead Stabilizer Torsion Box Compartment
16000 FC 3000 DY	16000 FC 3000 DY	55-505-00	Stabilizer Torsion Box Compartment
16000 FC 3000 DY	16000 FC 3000 DY	55-507-00	Fuselage - BS 2150-2570.3 (Section 48)
16000 FC 4500 DY	16000 FC 3000 DY	55-508-00	Fuselage - BS 2150-2570.3 (Section 48)
16000 FC 4500 DY	16000 FC 3000 DY	55-510-00	Vertical Stabilizer - Auxiliary Spar to Front Spar



INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
16000 FC 4500 DY	16000 FC 3000 DY	55-512-00	Vertical Stabilizer - Front Spar to Rear Spar
16000 FC 4500 DY	16000 FC 3000 DY	55-513-00	Vertical Stabilizer - Front Spar to Rear Spar
16000 FC 4500 DY	16000 FC 3000 DY	55-513-01	Vertical Stabilizer - Front Spar to Rear Spar
16000 FC 3000 DY	16000 FC 3000 DY	55-514-00	Vertical Stabilizer - Front Spar to Rear Spar
16000 FC 3000 DY	16000 FC 3000 DY	55-514-01	Vertical Stabilizer - Front Spar to Rear Spar
16000 FC 4500 DY	16000 FC 3000 DY	55-516-00	Vertical Stabilizer - Rear Spar to Trailing Edge
16000 FC 4500 DY	16000 FC 3000 DY	55-516-01	Vertical Stabilizer - Rear Spar to Trailing Edge
16000 FC 3000 DY	16000 FC 3000 DY	55-519-00	Rudder
16000 FC 4500 DY	16000 FC 3000 DY	55-520-00	Rudder
16000 FC 4500 DY	16000 FC 3000 DY	55-520-01	Rudder
16000 FC 4500 DY	16000 FC 3000 DY	55-523-00	Rudder Tab
16000 FC 3000 DY	16000 FC 3000 DY	55-524-00	Vertical Stabilizer Leading Edge
16000 FC 3000 DY	16000 FC 3000 DY	55-524-01	Vertical Stabilizer Leading Edge
16000 FC 3000 DY	16000 FC 3000 DY	55-525-00	Vertical Stabilizer - Auxiliary Spar to Front Spar
16000 FC 3000 DY	16000 FC 3000 DY	55-525-01	Vertical Stabilizer - Auxiliary Spar to Front Spar
16000 FC 4500 DY	16000 FC 3000 DY	55-526-00	Vertical Stabilizer - Front Spar to Rear Spar



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
16000 FC	16000 FC	55-528-01	Left Horizontal Stabilizer Center Section
16000 FC 3000 DY	16000 FC 3000 DY	55-529-01	Left Horizontal Stabilizer Center Section
16000 FC 3000 DY	16000 FC 3000 DY	55-530-01	Left Horizontal Stabilizer Center Section
16000 FC 3000 DY	16000 FC 3000 DY	55-531-01	Left Horizontal Stabilizer Center Section
16000 FC 4500 DY	16000 FC 3000 DY	55-532-01	Left Horizontal Stabilizer - Front Spar to Rear Spar
16000 FC 4500 DY	16000 FC 3000 DY	55-533-01	Left Horizontal Stabilizer - Front Spar to Rear Spar
16000 FC 4500 DY	16000 FC 3000 DY	55-536-01	Left Elevator
16000 FC 4500 DY	16000 FC 3000 DY	55-536-03	Left Elevator
16000 FC 4500 DY	16000 FC 4500 DY	55-537-01	Left Horizontal Stabilizer Tip
16000 FC	16000 FC	55-539-02	Right Horizontal Stabilizer Center Section
16000 FC 3000 DY	16000 FC 3000 DY	55-540-02	Right Horizontal Stabilizer Center Section
16000 FC 3000 DY	16000 FC 3000 DY	55-541-02	Right Horizontal Stabilizer Center Section
16000 FC 3000 DY	16000 FC 3000 DY	55-542-02	Right Horizontal Stabilizer Center Section
16000 FC 4500 DY	16000 FC 3000 DY	55-543-02	Right Horizontal Stabilizer - Front Spar to Rear Spar
16000 FC 4500 DY	16000 FC 3000 DY	55-544-02	Right Horizontal Stabilizer - Front Spar to Rear Spar
16000 FC 4500 DY	16000 FC 3000 DY	55-547-02	Right Elevator
16000 FC 4500 DY	16000 FC 3000 DY	55-547-04	Right Elevator



INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
16000 FC 4500 DY	16000 FC 4500 DY	55-548-02	Right Horizontal Stabilizer Tip
16000 FC 3000 DY	16000 FC 3000 DY	55-549-00	Area Aft of Bulkhead and Stabilizer Torsion Box Compartment
16000 FC 3000 DY	16000 FC 3000 DY	55-550-00	Vertical Stabilizer - Front Spar to Rear Spar
16000 FC 3000 DY	16000 FC 3000 DY	55-550-01	Vertical Stabilizer - Front Spar to Rear Spar
16000 FC 3000 DY	16000 FC 3000 DY	55-551-00	Left Horizontal Stabilizer Tip
16000 FC 3000 DY	16000 FC 3000 DY	55-552-00	Right Horizontal Stabilizer Tip
16000 FC 4500 DY	16000 FC 3000 DY	55-810-00	Vertical Stabilizer - Auxiliary Spar to Front Spar
16000 FC 4500 DY	16000 FC 3000 DY	55-811-00	Vertical Stabilizer - Auxiliary Spar / Front Spar
16000 FC 3500 DY	16000 FC 3000 DY	55-818-00	Vertical Stabilizer - Rear Spar to Trailing Edge
16000 FC 3500 DY	16000 FC 3000 DY	55-819-00	Vertical Stabilizer - Rear Spar to Trailing Edge
16000 FC 4500 DY	16000 FC 3000 DY	55-826-00	Vertical Stabilizer Forward Tip
16000 FC 4500 DY	16000 FC 3000 DY	55-834-01	Left Horizontal Stabilizer - Auxiliary Spar to Front Spar
16000 FC 4500 DY	16000 FC 3000 DY	55-842-01	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
16000 FC 4500 DY	16000 FC 3000 DY	55-843-00	Left Horizontal Stabilizer - Rear Spar to Trailing Edge
16000 FC 4500 DY	16000 FC 3000 DY	55-854-02	Right Horizontal Stabilizer Auxiliary Spar to Front Spar
16000 FC 4500 DY	16000 FC 3000 DY	55-862-02	Right Horizontal Stabilizer - Rear Spar to Trailing Edge



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
16000 FC 4500 DY	16000 FC 3000 DY	55-863-00	Right Horizontal Stabilizer - Rear Spar to Trailing Edge
16000 FC 4500 DY	16000 FC 3000 DY	57-503-01	Slat Number 7
16000 FC 3000 DY	16000 FC 3000 DY	57-506-01	Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17
16000 FC 3000 DY	16000 FC 3000 DY	57-508-01	Wing Inspar Area (Fuel Tanks) - Rib 17 to Rib 34
16000 FC 3000 DY	16000 FC 3000 DY	57-509-01	Wing Inspar Area (Fuel Tanks) - Rib 34 to Wing Tip
16000 FC	16000 FC	57-510-01	Main Tank - Rib 17 to Rib 32 - Left Wing
16000 FC	16000 FC	57-511-01	Main Tank - Rib 17 to Rib 32 - Left Wing
16000 FC	16000 FC	57-514-00	Wing Inboard and Outboard Main Flap Attach Bolts
16000 FC 4500 DY	16000 FC 3000 DY	57-516-01	Left Wing Inboard Main Flap
16000 FC 4500 DY	16000 FC 3000 DY	57-517-01	Left Wing Inboard Main Flap
16000 FC 4500 DY	16000 FC 3000 DY	57-518-01	Left Wing Inboard Aft Flap
16000 FC 4000 DY	16000 FC 4000 DY	57-521-00	Wing Inboard Trailing Edge Flap Torque Tube
16000 FC 3750 DY	16000 FC 3000 DY	57-523-01	Left Wing Outboard Flap
16000 FC 4500 DY	16000 FC 3000 DY	57-524-01	Left Wing Outboard Flap
16000 FC	16000 FC	57-530-01	Left Wing Flap Support Fairing Number 4
16000 FC 4500 DY	16000 FC 3000 DY	57-531-01	Inboard Flap Center Track Fairing - Left Wing
16000 FC	16000 FC	57-532-01	Left Wing Flap Support Fairing Number 3
16000 FC 4500 DY	16000 FC 3000 DY	57-536-02	Slat Number 8



INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
16000 FC 3000 DY	16000 FC 3000 DY	57-541-02	Wing Inspar Area (Fuel Tanks) - Inboard of Wing Rib 17
16000 FC 3000 DY	16000 FC 3000 DY	57-543-02	Wing Inspar Area (Fuel Tanks) - Rib 17 to Rib 34
16000 FC 3000 DY	16000 FC 3000 DY	57-544-02	Wing Inspar Area (Fuel Tanks) - Rib 34 to Wing Tip
16000 FC	16000 FC	57-545-02	Main Tank - Rib17 to Rib 32 - Right Wing
16000 FC	16000 FC	57-546-02	Main Tank - Rib 17 to Rib 32 - Right Wing
16000 FC 4500 DY	16000 FC 3000 DY	57-551-02	Right Wing Inboard Main Flap
16000 FC 4500 DY	16000 FC 3000 DY	57-552-02	Right Wing Inboard Main Flap
16000 FC 4500 DY	16000 FC 3000 DY	57-553-02	Right Wing Inboard Aft Flap
16000 FC 3750 DY	16000 FC 3000 DY	57-556-02	Right Wing Outboard Flap
16000 FC 4500 DY	16000 FC 3000 DY	57-557-02	Right Wing Outboard Flap
16000 FC	16000 FC	57-560-02	Right Wing Flap Support Fairing Number 5
16000 FC 4500 DY	16000 FC 3000 DY	57-561-02	Inboard Flap Center Track Fairing - Right Wing
16000 FC	16000 FC	57-562-02	Right Wing Flap Support Fairing Number 6
16000 FC 4500 DY	16000 FC 3000 DY	57-607-01	Left Wing
16000 FC 3000 DY	16000 FC 3000 DY	57-608-01	Left Wing
16000 FC 4500 DY	16000 FC 3000 DY	57-620-02	Right Wing
16000 FC 3000 DY	16000 FC 3000 DY	57-621-02	Right Wing



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
16000 FC 2250 DY	16000 FC 2250 DY	57-800-00	Wing Center Section
16000 FC 3000 DY	16000 FC 3000 DY	57-802-00	Wing Center Section
16000 FC 4500 DY	16000 FC 3000 DY	57-820-01	Slat Number 6
16000 FC 4500 DY	16000 FC 3000 DY	57-822-01	Slat Number 5
16000 FC 4500 DY	16000 FC 3000 DY	57-824-01	Slat Number 4
16000 FC 4500 DY	16000 FC 3000 DY	57-826-01	Slat Number 3
16000 FC 4500 DY	16000 FC 3000 DY	57-828-01	Slat Number 2
16000 FC 4500 DY	16000 FC 3000 DY	57-830-01	Slat Number 1
16000 FC 4500 DY	16000 FC 3000 DY	57-831-01	Slat Number 1
16000 FC 4500 DY	16000 FC 3000 DY	57-834-01	Center Fuel Tank - Rib 1 to Rib 8 - Left Wing
16000 FC 4500 DY	16000 FC 3000 DY	57-838-01	Main Tank - Rib 8 to Rib 17 - Left Wing
16000 FC 4500 DY	16000 FC 3000 DY	57-842-01	Main Tank - Rib 17 to Rib 32 - Left Wing
16000 FC 4500 DY	16000 FC 3000 DY	57-844-01	Left Wing Surge Tank - Rib 32 to Rib 34
16000 FC 3000 DY	16000 FC 3000 DY	57-845-01	Main Tank Rib 32 to Rib 34 - Left Wing
16000 FC 4500 DY	16000 FC 3000 DY	57-846-01	Inspar Area - Rib 34 to Wing Tip - Left Wing
16000 FC 3000 DY	16000 FC 3000 DY	57-847-01	Main Tank, Surge Tank, and Inspar Area - Left Wing



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
16000 FC 4500 DY	16000 FC 3000 DY	57-850-01	Left Wing Tip
16000 FC 3000 DY	16000 FC 3000 DY	57-851-01	Left Wing Tip
16000 FC 4500 DY	16000 FC 3000 DY	57-912-02	Slat Number 9
16000 FC 4500 DY	16000 FC 3000 DY	57-914-02	Slat Number 10
16000 FC 4500 DY	16000 FC 3000 DY	57-916-02	Slat Number 11
16000 FC 4500 DY	16000 FC 3000 DY	57-918-02	Slat Number 12
16000 FC 4500 DY	16000 FC 3000 DY	57-920-02	Slat Number 13
16000 FC 4500 DY	16000 FC 3000 DY	57-922-02	Slat Number 14
16000 FC 4500 DY	16000 FC 3000 DY	57-923-02	Slat Number 14
16000 FC 4500 DY	16000 FC 3000 DY	57-926-02	Center Fuel Tank - Rib 1 to Rib 8 - Right Wing
16000 FC 4500 DY	16000 FC 3000 DY	57-930-02	Main Tank - Rib 8 to Rib 17 - Right Wing
16000 FC 4500 DY	16000 FC 3000 DY	57-934-02	Main Tank - Rib 17 to Rib 32 - Right Wing
16000 FC 4500 DY	16000 FC 3000 DY	57-936-02	Right Wing Surge Tank - Rib 32 to Rib 34
16000 FC 3000 DY	16000 FC 3000 DY	57-937-02	Main Tank - Rib 32 to Rib 34 - Right Wing
16000 FC 4500 DY	16000 FC 3000 DY	57-938-02	Inspar Area - Rib 34 to Wing Tip - Right Wing
16000 FC 3000 DY	16000 FC 3000 DY	57-939-02	Main Tank, Surge Tank, and Inspar Area - Right Wing



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
16000 FC 4500 DY	16000 FC 3000 DY	57-942-02	Right Wing Tip
16000 FC 3000 DY	16000 FC 3000 DY	57-943-02	Right Wing Tip
18000 FC 3375 DY	16000 FC 3000 DY	53-543-00	Overwing Wing-To-Body Fairings, Left
18000 FC 3375 DY	16000 FC 3000 DY	53-544-00	Overwing Wing-To-Body Fairings, Right
18000 FC 3750 DY	18000 FC 3750 DY	52-250-00	Equipment Compartment Exterior Door Latch Mechanisms
20000 FC 6000 DY	10000 FC 3000 DY	53-572-01	Main Deck Cargo Compartment - Left
20000 FC 6000 DY	10000 FC 3000 DY	53-573-01	Main Deck Cargo Compartment - Right
20000 FC 6000 DY	10000 FC 3000 DY	53-638-00	Main Deck Cargo Compartment
20000 FC 6000 DY	20000 FC 6000 DY	53-632-00	Main Deck Cargo Compartment
24000 FC 4500 DY	8000 FC 1500 DY	53-545-01	Forward Wing-To-Body Fairings - Left
24000 FC 4500 DY	8000 FC 1500 DY	53-545-02	Forward Wing-To-Body Fairings - Right
24000 FC 4500 DY	8000 FC 1500 DY	53-547-01	Aft Wing-To-Body Fairings - Left
24000 FC 4500 DY	8000 FC 1500 DY	53-547-02	Aft Wing-To-Body Fairings - Right
24000 FC 4500 DY	8000 FC 1500 DY	53-547-03	Aft Wing-To-Body Fairings - Left
24000 FC 4500 DY	8000 FC 1500 DY	53-547-04	Aft Wing-To-Body Fairings - Right
24000 FC 4500 DY	8000 FC 1500 DY	53-620-00	Forward Wing-To-Body Fairings



INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
24000 FC 4500 DY	24000 FC 4500 DY	20-640-10	Wing Center Section Fuel Tank (SFAR 88)
24000 FC 4500 DY	24000 FC 4500 DY	20-641-00	ECS Bay Installed EWIS
24000 FC 4500 DY	24000 FC 4500 DY	20-672-00	Area Behind the Bulk Cargo Compartment
24000 FC 4500 DY	24000 FC 4500 DY	20-796-00	Main Deck Entry Doors
24000 FC 4500 DY	24000 FC 4500 DY	20-856-11	Center Fuel Tank (Rib 1 to Rib 8) - Left Wing (SFAR 88)
24000 FC 4500 DY	24000 FC 4500 DY	20-856-12	Center Fuel Tank (Rib 1 to Rib 8) - Right Wing (SFAR 88)
24000 FC 4500 DY	24000 FC 4500 DY	20-858-11	Main Tank (Rib 8 to Rib 17) - Left Wing (SFAR 88)
24000 FC 4500 DY	24000 FC 4500 DY	20-858-12	Main Tank (Rib 8 to Rib 17) - Right Wing (SFAR 88)
24000 FC 4500 DY	24000 FC 4500 DY	20-860-11	Main Tank (Rib 17 to Rib 32) - Left Wing (SFAR 88)
24000 FC 4500 DY	24000 FC 4500 DY	20-860-12	Main Tank (Rib 17 to Rib 32) - Right Wing (SFAR 88)
24000 FC 4500 DY	24000 FC 4500 DY	20-866-00	Flap Supports No. 3
24000 FC 4500 DY	24000 FC 4500 DY	20-868-00	Flap Support No. 6
24000 FC 4500 DY	24000 FC 4500 DY	54-508-01	Left Nacelle Strut
24000 FC 4500 DY	24000 FC 4500 DY	54-516-02	Right Nacelle Strut
24000 FC 4500 DY	24000 FC 4500 DY	54-537-01	Left Nacelle Strut
24000 FC 4500 DY	24000 FC 4500 DY	54-545-02	Right Nacelle Strut



INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
24000 FC 4500 DY	24000 FC 4500 DY	54-567-01	Left Nacelle Strut
24000 FC 4500 DY	24000 FC 4500 DY	54-575-02	Right Nacelle Strut
24000 FC 4500 DY	24000 FC 4500 DY	55-656-01	Left Horizontal Stabilizer Leading Edge
24000 FC 4500 DY	24000 FC 4500 DY	55-660-02	Right Horizontal Stabilizer Leading Edge
24000 FC 4500 DY	24000 FC 4500 DY	55-806-00	Vertical Stabilizer Leading Edge
28000 FC 5250 DY	4000 FC 750 DY	54-507-01	Left Nacelle Strut
28000 FC 5250 DY	4000 FC 750 DY	54-515-02	Right Nacelle Strut
28000 FC 5250 DY	4000 FC 750 DY	54-536-01	Left Nacelle Strut
28000 FC 5250 DY	4000 FC 750 DY	54-544-02	Right Nacelle Strut
28000 FC 5250 DY	4000 FC 750 DY	54-566-01	Left Nacelle Strut
28000 FC 5250 DY	4000 FC 750 DY	54-574-02	Right Nacelle Strut
28000 FC 5250 DY	8000 FC 1500 DY	52-527-01	Left #1 Entry Door
28000 FC 5250 DY	8000 FC 1500 DY	52-528-01	Left #2 Passenger Entry Door
28000 FC 5250 DY	8000 FC 1500 DY	52-529-01	Left #3 Overwing Door
28000 FC 5250 DY	8000 FC 1500 DY	52-530-01	Left #3 Passenger Entry Door
28000 FC 5250 DY	8000 FC 1500 DY	52-531-01	Left #4 Passenger Entry Door



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
28000 FC 5250 DY	8000 FC 1500 DY	52-532-01	Left #4 Passenger Entry Door
28000 FC 5250 DY	8000 FC 1500 DY	52-533-01	Left #5 Passenger Entry Door
28000 FC 5250 DY	8000 FC 1500 DY	52-542-02	Right #1 Entry Door
28000 FC 5250 DY	8000 FC 1500 DY	52-543-02	Right #2 Passenger Entry Door
28000 FC 5250 DY	8000 FC 1500 DY	52-544-02	Right #3 Overwing Door
28000 FC 5250 DY	8000 FC 1500 DY	52-545-02	Right #3 Passenger Entry Door
28000 FC 5250 DY	8000 FC 1500 DY	52-546-02	Right #4 Passenger Entry Door
28000 FC 5250 DY	8000 FC 1500 DY	52-547-02	Right #4 Passenger Entry Door
28000 FC 5250 DY	8000 FC 1500 DY	52-548-02	Right #5 Passenger Entry Door
30000 FC	3000 FC	54-707-01	Forward Engine Mount Bulkhead (PW)
30000 FC	4000 FC	53-748-01	Passenger Entry Overwing Door #3 - Cutout
30000 FC	4000 FC	54-704-03	Lower Spar Chord (PW)
30000 FC	4000 FC	54-705-01	Lower Spar (PW)
30000 FC	4000 FC	54-706-03	Lower Spar @ AEMB (PW)
30000 FC	4000 FC	54-707-04	Forward Engine Mount Bulkhead (PW)
30000 FC	4000 FC	54-709-01	PW 4090 and PW 4098 Forward Engine Mount Assembly (PW)
30000 FC	4000 FC	54-714-03	Upper Spar (GE)
30000 FC	4000 FC	54-719-02	Lower Spar at Cutout (GE)
30000 FC	4000 FC	54-720-03	Lower Spar (GE)
30000 FC	4000 FC	57-722-01	Wing Outboard, Lower Panel Rear Spar Chord, Lower Chord



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
30000 FC	4000 FC	57-743-01	Wing Outboard, Rear Spar Web at Forward Trunnion Fitting
30000 FC	8000 FC	53-703-01	Upper and Lower Lobe Skin Panels
30000 FC	8000 FC	53-731-01	Fuselage Skin adjacent to Strakelet Attach Fitting (L/N 1-218)
30000 FC	8000 FC	53-748-02	Passenger Entry Overwing Door #3 - Cutout
30000 FC	8000 FC	53-781-01	Pressure Bulkhead at STA 2150; Sec 48 Lap Splice (L/N 1-3)
30000 FC	8000 FC	54-702-03	Strut Upper Spar (PW)
30000 FC	8000 FC	54-702-04	Strut Upper Spar (PW)
30000 FC	8000 FC	54-703-05	Strut Side Skin (PW)
30000 FC	8000 FC	54-705-03	Lower Spar (PW)
30000 FC	8000 FC	54-706-01	Lower Spar @ AEMB (PW)
30000 FC	8000 FC	54-711-02	Strut Upper Spar Bay 5/6 at Cutout (GE)
30000 FC	8000 FC	54-713-02	Strut Upper Spar Bay 6 at Cutout (GE)
30000 FC	8000 FC	54-714-02	Upper Spar (GE)
30000 FC	8000 FC	54-720-01	Lower Spar (GE)
30000 FC	8000 FC	54-775-01	Forward Upper Spar (RR)
30000 FC	8000 FC	54-777-01	Aft Lower Chord at Aft Engine Mount Bulkhead (RR)
30000 FC	8000 FC	54-781-03	Aluminum Aft Strut Bulkhead (RR)
30000 FC	8000 FC	57-702-02	SOB Splice, Lower Surface, T-Chord
30000 FC	8000 FC	57-713-02	Wing Center Section, Lower Panel Keel Beam Chord, Lower Skin
30000 FC	8000 FC	57-722-07	Wing Outboard, Lower Panel Rear Spar Chord, Lower Chord
30000 FC	8000 FC	57-737-01	Wing Outboard Upper Panel, Rear Spar Upper Chord
30000 FC	8000 FC	57-743-03	Wing Outboard, Rear Spar Web at Forward Trunnion Fitting
30000 FC	8000 FC	57-760-01	No. 3 and No. 6 Inboard Flap Support Forward Tension Link
30000 FC	8000 FC	57-768-03	No. 3 and No. 6 Inboard Flap Support Drive Arm Assembly



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
30000 FC	8000 FC	57-771-03	No. 3 and No. 6 Inboard Flap Support Carrier Beam
30000 FC	8000 FC	57-776-01	No. 3 and No. 6 Inboard Flap Support Carrier Beam
30000 FC	10000 FC	53-734-01	Longitudinal Skin Lap Splices Inner Skin (L/N 1-422)
30000 FC	10000 FC	53-743-01	Longitudinal Skin Lap Splices Inner Skin (L/N 1-450)
30000 FC	10000 FC	53-755-01	Longitudinal Skin Lap Splices Inner Skin (L/N 1-422)
30000 FC	10000 FC	53-774-01	Longitudinal Skin Lap Splices Inner Skin (L/N 1-422)
30000 FC	12000 FC	53-706-01	ACL Installation External Doubler
30000 FC	12000 FC	53-733-04	Fuselage Circumferential Skin/Stringer Splice, BS 1035
30000 FC	12000 FC	53-753-06	Aft Wheel Well Bulkhead Horizontal Stiffeners
30000 FC	12000 FC	53-754-05	Fuselage Circumferential Skin/Stringer Splice
30000 FC	12000 FC	53-781-02	Pressure Bulkhead at STA 2150; Sec 48 Lap Splice (L/N 1-422)
30000 FC	12000 FC	53-781-03	Pressure Bulkhead at STA 2150; Sec 48 Lap Splice (L/N 1-422)
30000 FC	12000 FC	54-702-02	Strut Upper Spar (PW)
30000 FC	12000 FC	54-703-02	Strut Side Skin (PW)
30000 FC	12000 FC	54-704-04	Lower Spar Chord (PW)
30000 FC	12000 FC	54-707-03	Forward Engine Mount Bulkhead (PW)
30000 FC	12000 FC	54-779-03	Aft Engine Mount Bulkhead (RR)
30000 FC	12000 FC	55-704-01	Pivot Fitting Straps (Both Pairs - Upper and Lower) L/N 1-40
30000 FC	12000 FC	55-704-02	Pivot Fitting Straps (Both Pairs - Upper and Lower) L/N 1-40
30000 FC	12000 FC	55-704-03	Pivot Fitting Straps (Both Pairs - Upper and Lower) L/N 41 and on
30000 FC	12000 FC	55-704-04	Pivot Fitting Straps (Both Pairs - Upper and Lower) L/N 41 and on
30000 FC	12000 FC	57-755-01	Inboard Main Flap Inboard Closeout Rib
30000 FC	12000 FC	57-755-04	Inboard Main Flap Inboard Closeout Rib
30000 FC	16000 FC	27-701-01	Safety Rod, Horizontal Stabilizer Trim Actuator



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
30000 FC	16000 FC	52-704-01	Large Cargo Door Latch Frame Inner Chord
30000 FC	16000 FC	52-705-01	Large Cargo Door Outer Skin at Attachment to Main Hinges
30000 FC	16000 FC	52-708-01	Large Cargo Door Latch Frame Inner Chord
30000 FC	16000 FC	52-709-01	Large Cargo Door Outer Skin at Attachment to Main Hinges
30000 FC	16000 FC	53-705-01	ACL Installation External Doubler
30000 FC	16000 FC	53-716-01	FWD Large Cargo Door - Cutout Outer Chord - Upper Sill
30000 FC	16000 FC	53-723-01	NLG Well Top Panel
30000 FC	16000 FC	53-724-01	WL 152 Beam (C/L 1 to 40)
30000 FC	16000 FC	53-724-02	WL 152 Beam (C/L 41 and on)
30000 FC	16000 FC	53-727-01	NLG Drag Brace Fitting - Lug and Bushing Interface
30000 FC	16000 FC	53-728-02	Longitudinal Skin Crack Under Radome
30000 FC	16000 FC	53-733-01	Fuselage Circumferential Skin/Stringer Splice, BS 1035 (L/N 75 and on)
30000 FC	16000 FC	53-742-01	Satcom Antenna - Circumferential Cracking with Broken Stringer
30000 FC	16000 FC	53-753-05	Aft Wheel Well Bulkhead Side Fitting Outer Chord
30000 FC	16000 FC	53-754-02	Fuselage Circumferential Skin/Stringer Splice (L/N 75 and on)
30000 FC	16000 FC	53-757-01	Passenger Entry Door #3 (-200)
30000 FC	16000 FC	53-768-01	Aft Large Cargo Door - Cutout
30000 FC	16000 FC	53-769-01	Aft Large Cargo Door - Cutout Outer Chord - Upper Sill
30000 FC	16000 FC	53-783-01	Pressure Bulkhead, STA 2150, Dome Web Attachment to Y-Ring (L/N 1-422)
30000 FC	16000 FC	53-785-01	Stabilizer Pivot Bulkhead STA 2370 - Vertical Stiffeners
30000 FC	16000 FC	54-701-02	Aft Upper Spar Chord Splice (PW)
30000 FC	16000 FC	54-704-02	Lower Spar Chord (PW)
30000 FC	16000 FC	54-706-04	Strut Lower Spar (PW)
30000 FC	16000 FC	54-707-05	Strut Forward Engine Mount Bulkhead Assembly (PW)



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
30000 FC	16000 FC	54-708-01	Strut Aft Engine Mount Bulkhead Assembly (PW)
30000 FC	16000 FC	54-710-02	Upper Spar Bay 3 (GE)
30000 FC	16000 FC	54-712-02	Strut Upper Spar Bay 5 at Cutout (GE)
30000 FC	16000 FC	54-715-02	Upper Spar (GE)
30000 FC	16000 FC	54-716-01	Side Skin Cutout (GE)
30000 FC	16000 FC	54-717-02	Lower Spar Bay 3 (GE)
30000 FC	16000 FC	54-718-02	Lower Outboard Spar Chord at Aft Engine Mount Bulkhead (GE)
30000 FC	16000 FC	54-721-01	Forward Engine Mount Bulkhead (GE)
30000 FC	16000 FC	54-773-01	Upper Spar Chord (RR)
30000 FC	16000 FC	54-774-01	Forward Upper Spar (RR)
30000 FC	16000 FC	54-776-01	Lower Chord (RR)
30000 FC	16000 FC	54-777-02	Aft Lower Chord at Aft Engine Mount Bulkhead (RR)
30000 FC	16000 FC	54-778-01	Forward Engine Mount Bulkhead (RR)
30000 FC	16000 FC	54-779-01	Aft Engine Mount Bulkhead (RR)
30000 FC	16000 FC	54-779-02	Aft Engine Mount Bulkhead (RR)
30000 FC	16000 FC	54-780-01	Strut Aft Bulkhead (RR)
30000 FC	16000 FC	54-780-02	Aluminum Aft Strut Bulkhead (RR)
30000 FC	16000 FC	55-701-01	Upper Double Plus Chord Horizontal Stabilizer
30000 FC	16000 FC	55-702-01	Splice Fitting - Front Spar Upper Chord Horizontal Stabilizer
30000 FC	16000 FC	55-703-01	Pivot Fitting Lugs
30000 FC	16000 FC	55-705-01	Pivot Fitting Pins Outer Pin
30000 FC	16000 FC	55-706-01	Jackscrew Fitting Lugs DWG 182W7402
30000 FC	16000 FC	55-707-01	Elevator Actuator Fitting 183W1312 L/N 718 and on and all retrofitted airplanes.
30000 FC	16000 FC	57-701-02	SOB Splice, Lower Surface, T-Chord



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
30000 FC	16000 FC	57-701-03	SOB Splice, Lower Surface, T-Chord
30000 FC	16000 FC	57-702-03	SOB Splice, Lower Surface, T-Chord
30000 FC	16000 FC	57-703-02	SOB Splice, Lower Surface, T-Chord
30000 FC	16000 FC	57-703-03	SOB Splice, Lower Surface, T-Chord
30000 FC	16000 FC	57-704-01	SOB Splice, Front Spar Chord
30000 FC	16000 FC	57-706-02	SOB Splice, Rear Spar Chord
30000 FC	16000 FC	57-708-02	Body Chord Inspection at Stringer 36 to 41
30000 FC	16000 FC	57-708-03	Body Chord Inspection at Splice Plate
30000 FC	16000 FC	57-713-05	Wing Center Section, Lower Panel Keel Beam Chord, Lower Skin
30000 FC	16000 FC	57-722-02	Wing Outboard, Lower Panel Rear Spar Chord, Lower Chord
30000 FC	16000 FC	57-724-02	Wing Outboard, Lower Panel Front Spar Chord, Lower Chord
30000 FC	16000 FC	57-737-05	Wing Outboard Upper Panel, Rear Spar Upper Chord
30000 FC	16000 FC	57-737-06	Wing Outboard Upper Panel, Rear Spar Upper Chord
30000 FC	16000 FC	57-753-01	Inboard Main Flap Torque Tube
30000 FC	16000 FC	57-754-01	Inboard Main Flap Inboard Closeout Rib
30000 FC	16000 FC	57-755-03	Inboard Main Flap Inboard Closeout Rib
30000 FC	16000 FC	57-756-01	Inboard Main Flap Inboard Closeout Rib Fitting
30000 FC	16000 FC	57-757-01	No. 3 and No. 6 Inboard Flap Support Underwing Fitting
30000 FC	16000 FC	57-758-01	No. 3 and No. 6 Inboard Flap Support Underwing Fitting
30000 FC	16000 FC	57-759-01	No. 3 and No. 6 Inboard Flap Support Underwing Fitting
30000 FC	16000 FC	57-760-03	No. 3 and No. 6 Inboard Flap Support Forward Tension Link
30000 FC	16000 FC	57-762-01	No. 3 and No. 6 Inboard Flap Support Forward Tension Link
30000 FC	16000 FC	57-766-01	No. 3 and No. 6 Inboard Flap Support Pivot Link
30000 FC	16000 FC	57-767-01	No. 3 and No. 6 Inboard Flap Support Pivot Link



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
30000 FC	16000 FC	57-768-01	No. 3 and No. 6 Inboard Flap Support Drive Arm Assembly
30000 FC	16000 FC	57-771-01	No. 3 and No. 6 Inboard Flap Support Carrier Beam
30000 FC	16000 FC	57-772-01	No. 3 and No. 6 Inboard Flap Support Carrier Beam
30000 FC	16000 FC	57-773-01	No. 3 and No. 6 Inboard Flap Support Carrier Beam
30000 FC	16000 FC	57-774-01	No. 3 and No. 6 Inboard Flap Support Carrier Beam
30000 FC	16000 FC	57-775-01	No. 3 and No. 6 Inboard Flap Support Carrier Beam
30000 FC	16000 FC	57-777-01	No. 3 and No. 6 Inboard Flap Support Carrier Beam
30000 FC	16000 FC	57-782-01	No. 4 and No. 5 Inboard Flap Support Carrier Beam
30000 FC	16000 FC	57-783-01	No. 4 and No. 5 Inboard Flap Support Pillow Block
30000 FC	16000 FC	57-784-01	No. 4 and No. 5 Inboard Flap Support Pillow Block
30000 FC	16000 FC	57-785-01	No. 1, No. 2, No. 7 and No. 8 Outboard Flap Supports
32000 FC 6000 DY	0 FC 0 DY	53-612-00	Passenger Compartment Left and Right
32000 FC 6000 DY	0 FC 0 DY	53-613-00	Area above Passenger Compartment Ceiling
32000 FC 6000 DY	0 FC 0 DY	53-618-00	Passenger Compartment Left and Right
32000 FC 6000 DY	16000 FC 3000 DY	20-706-00	APU, RAT, Galley and Cabin Power Feeders in Passenger Compartment
32000 FC 6000 DY	16000 FC 3000 DY	20-728-00	Rat and Cabin Power Feeder Bundles in Passenger Compartment
32000 FC 6000 DY	16000 FC 3000 DY	52-504-00	Forward Large Cargo Door
32000 FC 6000 DY	16000 FC 3000 DY	52-512-00	Aft Large Cargo Door
32000 FC 6000 DY	16000 FC 3000 DY	53-550-00	Flight Compartment
32000 FC 6000 DY	16000 FC 3000 DY	53-561-00	Area Above Main Deck Compartment Ceiling



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
32000 FC 6000 DY	16000 FC 3000 DY	53-572-00	Passenger Compartment - Left
32000 FC 6000 DY	16000 FC 3000 DY	53-573-00	Passenger Compartment - Right
32000 FC 6000 DY	16000 FC 3000 DY	53-575-00	Area Above Main Deck Compartment Ceiling
32000 FC 6000 DY	16000 FC 3000 DY	53-581-00	Area Above Main Deck Compartment Ceiling
32000 FC 6000 DY	16000 FC 3000 DY	53-598-00	Area above Main Deck Compartment Ceiling
32000 FC 6000 DY	16000 FC 3000 DY	53-624-00	Main Deck Compartment Ceiling
32000 FC 6000 DY	16000 FC 3000 DY	53-625-00	Main Deck Compartment Ceiling
32000 FC 6000 DY	16000 FC 3000 DY	53-671-00	Lower Fuselage - Subzone 150 and 160
32000 FC 6000 DY	16000 FC 3000 DY	53-674-01	Supernumerary Cabin
32000 FC 6000 DY	16000 FC 3000 DY	53-675-00	Subzone 220 BS 246 to 655 (Section 41)
32000 FC 6000 DY	16000 FC 3000 DY	53-675-01	Subzone 220 BS 388 to 655
32000 FC 6000 DY	16000 FC 3000 DY	53-676-00	Subzone 230 BS 655 to 1035 (Section 43)
32000 FC 6000 DY	16000 FC 3000 DY	53-677-00	Subzone 240 BS 1035 to 1434 (Section 44)
32000 FC 6000 DY	16000 FC 3000 DY	53-678-00	Subzone 250 BS 1434 to 1832 (Section 46)
32000 FC 6000 DY	16000 FC 3000 DY	53-679-00	Subzone 260 BS 1832 to 2195.75 (Section 47)
32000 FC 6000 DY	16000 FC 3000 DY	55-528-05	Left Horizontal Stabilizer Center Section



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
32000 FC 6000 DY	16000 FC 3000 DY	55-539-06	Right Horizontal Stabilizer Center Section
32000 FC 6000 DY	16000 FC 3000 DY	57-606-00	Lower Fuselage - Subzone 130
32000 FC 6000 DY	32000 FC 6000 DY	52-505-00	Forward Large Cargo Door
32000 FC 6000 DY	32000 FC 6000 DY	52-513-00	Aft Large Cargo Door
40000 FC	1200 FC	53-725-03	Nose Landing Gear Well Cutout (C/L 1 to 40)
40000 FC	2000 FC	52-701-01	Passenger Entry Doors - Outer Skin and Structure
40000 FC	2000 FC	53-725-01	Nose Wheel Well Cutout Structure (C/L 1 to 40)
40000 FC	4000 FC	52-701-03	Passenger Entry Doors - Outer Skin and Structure
40000 FC	4000 FC	53-702-01	Lower Lobe Skin Panels
40000 FC	4000 FC	53-710-01	Longitudinal Skin Lap Splices Outer Skin
40000 FC	4000 FC	53-735-01	Longitudinal Skin Lap Splices Outer Skin - Except Lower Row (S-45). Typical - All Section 43 Lap Splices.
40000 FC	4000 FC	53-744-01	Longitudinal Skin Lap Splices Outer Skin
40000 FC	4000 FC	53-756-01	Longitudinal Skin Lap Splices Outer Skin
40000 FC	4000 FC	53-775-01	Longitudinal Skin Lap Splices Outer Skin
40000 FC	4000 FC	57-711-02	Wing Center Section, Lower Rear Spar Chord, Lower Chord
40000 FC	4000 FC	57-711-05	Wing Center Section, Lower Rear Spar Chord, Lower Chord
40000 FC	4000 FC	57-711-11	Wing Center Section, Lower Rear Spar Chord, Lower Chord
40000 FC	4000 FC	57-712-05	Wing Center Section, Lower Rear Spar Chord, Lower Skin
40000 FC	4000 FC	57-716-03	Wing Outboard, Typical Rear Spar Attachment, Lower Chord
40000 FC	4000 FC	57-728-02	Wing Outboard, MLG Beam Support Fitting, Mid Rib Lower Skin
40000 FC	4000 FC	57-729-02	Wing Outboard, Typical Stringer Attachment at Nacelle Fitting



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
40000 FC	4000 FC	57-730-01	Wing Outboard, Stringer Attachment at Nacelle Fitting
40000 FC	4000 FC	57-740-01	Wing Outboard, Upper Skin Tab
40000 FC	4000 FC	57-769-03	No. 3 and No. 6 Inboard Flap Support Carrier Beam
40000 FC	4000 FC	57-787-01	MLG Forward Trunnion Sideload Straps
40000 FC	4000 FC	57-788-01	MLG Forward Trunnion Outboard Support Fitting
40000 FC	4000 FC	57-790-01	MLG Beam Outboard Support Fitting, Lower Skin Flange
40000 FC	4000 FC	57-790-03	MLG Beam Outboard Support Fitting, Lower Skin Flange
40000 FC	4000 FC	57-796-01	Retraction Actuator Support Fitting Attach Flange
40000 FC	6000 FC	53-753-02	Aft Wheel Well Bulkhead Side Fitting Outer Chord
40000 FC	8000 FC	53-701-01	Upper Lobe Skin Panels
40000 FC	8000 FC	53-749-01	Passenger Entry Overwing Door #3 - Cutout
40000 FC	8000 FC	53-751-01	Passenger Entry Overwing Door #3 - Cutout
40000 FC	8000 FC	57-709-02	Wing Center Section, Lower Panel, Typical and Splice Stringer
40000 FC	8000 FC	57-710-02	Wing Center Section (WCS), Lower Panel, Splice Stringer
40000 FC	8000 FC	57-711-04	Wing Center Section, Lower Rear Spar Chord, Lower Chord
40000 FC	8000 FC	57-712-02	Wing Center Section, Lower Rear Spar Chord, Lower Skin
40000 FC	8000 FC	57-712-06	Wing Center Section, Lower Rear Spar Chord, Lower Skin
40000 FC	8000 FC	57-761-01	No. 3 and No. 6 Inboard Flap Support Forward Tension Link
40000 FC	8000 FC	57-761-04	No. 3 and No. 6 Inboard Flap Support Forward Tension Link
40000 FC	8000 FC	57-764-03	No. 3 and No. 6 Inboard Flap Support Aft Tension Beam
40000 FC	8000 FC	57-765-03	No. 3 and No. 6 Inboard Flap Support Aft Tension Beam
40000 FC	8000 FC	57-765-04	No. 3 and No. 6 Inboard Flap Support Aft Tension Beam
40000 FC	8000 FC	57-790-02	MLG Beam Outboard Support Fitting, Lower Skin Flange
40000 FC	8000 FC	57-793-01	MLG Drag Brace Support Fitting



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
40000 FC	9160 FC	53-725-05	Nose Landing Gear Well Cutout (C/L 41 and on)
40000 FC	10000 FC	53-709-01	Longitudinal Skin Lap Splices Inner Skin
40000 FC	10000 FC	53-734-02	Longitudinal Skin Lap Splices Inner Skin (L/N 423 and on)
40000 FC	10000 FC	53-734-03	Longitudinal Skin Lap Splices Inner Skin
40000 FC	10000 FC	53-743-02	Longitudinal Skin Lap Splices Inner Skin (L/N 451 and on)
40000 FC	10000 FC	53-743-03	Longitudinal Skin Lap Splices Inner Skin
40000 FC	10000 FC	53-743-04	Longitudinal Skin Lap Splices Inner Skin (L/N 1-450)
40000 FC	10000 FC	53-755-02	Longitudinal Skin Lap Splices Inner Skin (L/N 423 and on)
40000 FC	10000 FC	53-755-03	Longitudinal Skin Lap Splices Inner Skin
40000 FC	10000 FC	53-774-02	Longitudinal Skin Lap Splices Inner Skin (L/N 423 and on)
40000 FC	10000 FC	53-774-03	Longitudinal Skin Lap Splices Inner Skin
40000 FC	12000 FC	52-702-01	Large Cargo Door Latch Support Frame Fittings
40000 FC	12000 FC	52-706-01	Large Cargo Door Latch Support Frame Fittings
40000 FC	12000 FC	53-714-01	Passenger Entry Door #1 - Cutout
40000 FC	12000 FC	53-717-01	Fwd Large Cargo Door - Cutout
40000 FC	12000 FC	53-718-01	Fwd Large Cargo Door - Cutout
40000 FC	12000 FC	53-722-01	No. 3 Crew Window Cutout Structure
40000 FC	12000 FC	53-739-01	Passenger Entry Door #2 - Cutout Upper Sill
40000 FC	12000 FC	53-740-01	Passenger Entry Door #2 - Cutout
40000 FC	12000 FC	53-752-01	Passenger Entry Overwing Door #3 - Cutout Upper Main Sill
40000 FC	12000 FC	53-760-01	Passenger Entry Door #3 (-200)/#4 (-300) - Cutout
40000 FC	12000 FC	53-761-01	Passenger Entry Door #3 (-200)/#4 (-300) - Cutout
40000 FC	12000 FC	53-762-01	Small Cargo Door - Cutout Lower Main Sill
40000 FC	12000 FC	53-763-01	Small Cargo Door - Cutout Upper Main Sill



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
40000 FC	12000 FC	53-770-01	Aft Large Cargo Door - Upper Main Sill
40000 FC	12000 FC	53-778-01	Passenger Entry Door #4 (-200)/#5 (-300) - Cutout
40000 FC	12000 FC	53-779-01	Passenger Entry Door #4 (-200)/#5 (-300) - Cutout
40000 FC	12000 FC	53-781-04	Pressure Bulkhead at STA 2150; Sec 48 Lap Splice (L/N 423 and on)
40000 FC	12000 FC	53-781-05	Pressure Bulkhead at STA 2150; Sec 48 Lap Splice (L/N 423 and on)
40000 FC	16000 FC	52-703-01	Large Cargo Door Latch Support Frame Fitting (135W1191)
40000 FC	16000 FC	52-707-01	Large Cargo Door Latch Support Frame Fitting (135W1191)
40000 FC	16000 FC	53-704-01	Crown Skin Antenna Installation - TCAS
40000 FC	16000 FC	53-707-01	Crown Skin Production ACL Installation
40000 FC	16000 FC	53-708-01	Ground Maneuver Camera Installation
40000 FC	16000 FC	53-711-01	Passenger Entry Door #1 - Cutout
40000 FC	16000 FC	53-712-01	Passenger Entry Door #1 - Cutout
40000 FC	16000 FC	53-713-01	Passenger Entry Door #1 - Cutout
40000 FC	16000 FC	53-715-01	Forward Large Cargo Door - Cutout
40000 FC	16000 FC	53-719-01	Forward Equipment Bay Access Hatch Cutout Structure
40000 FC	16000 FC	53-720-01	E/E Bay Access Hatch Cutout Structure
40000 FC	16000 FC	53-721-01	No. 1 Crew Window Cutout Structure
40000 FC	16000 FC	53-725-02	Nose Wheel Well Cutout Structure (C/L 41 and on)
40000 FC	16000 FC	53-725-04	Nose Landing Gear Well Cutout (C/L 1 to 40)
40000 FC	16000 FC	53-725-06	Nose Landing Gear Well Cutout (C/L 41 and on)
40000 FC	16000 FC	53-725-07	Nose Wheel Well Cutout Structure (L/N 1 to 40)
40000 FC	16000 FC	53-726-01	Nose Wheel Well Trunnion Support Fitting
40000 FC	16000 FC	53-726-02	Nose Wheel Well Trunnion Support Fitting (C/L 41 and on)
40000 FC	16000 FC	53-728-01	Crown Panel Skin/Stringer Under Radome



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
40000 FC	16000 FC	53-730-01	Longitudinal Skin Crack Under Antenna Attach Angle/Skin Lug Fittings
40000 FC	16000 FC	53-731-02	Fuselage Skin adjacent to Strakelet Attach Fitting (L/N 219 and on)
40000 FC	16000 FC	53-733-02	Fuselage Circumferential Skin/Stringer Splice, BS 1035 (L/N 75 and on)
40000 FC	16000 FC	53-733-03	Fuselage Circumferential Skin/Stringer Splice, BS 1035 (L/N 75 and on)
40000 FC	16000 FC	53-733-05	Fuselage Circumferential Skin/Stringer Splice, BS 1035
40000 FC	16000 FC	53-733-06	Fuselage Circumferential Skin/Stringer Splice, BS 1035
40000 FC	16000 FC	53-736-01	Passenger Entry Door #2 - Cutout
40000 FC	16000 FC	53-737-01	Passenger Entry Door #2 - Cutout
40000 FC	16000 FC	53-741-01	Passenger Entry Door #2 - Cutout Door Stop Backup Fitting
40000 FC	16000 FC	53-742-02	Skin and Stringer at SATCOM antenna installation
40000 FC	16000 FC	53-745-01	Front Spar Side Fitting Inner Chord Splice
40000 FC	16000 FC	53-746-01	Rear Spar Side Fitting Inner Chord Splice
40000 FC	16000 FC	53-746-02	Rear Spar Side Fitting
40000 FC	16000 FC	53-746-03	Rear Spar Side Fitting at Seat Track Attachment
40000 FC	16000 FC	53-747-01	Aft Wheel Well Bulkhead Inner Chord Splice
40000 FC	16000 FC	53-750-01	Passenger Entry Overwing Door #3 - Cutout
40000 FC	16000 FC	53-753-01	Aft Wheel Well Bulkhead Side Fitting Inner Chord Splice
40000 FC	16000 FC	53-753-03	Aft Wheel Well Bulkhead Side Fitting Outer Chord
40000 FC	16000 FC	53-753-04	Aft Wheel Well Bulkhead Side Fitting Outer Chord
40000 FC	16000 FC	53-753-07	Aft Wheel Well Bulkhead Horizontal Stiffeners
40000 FC	16000 FC	53-754-01	Crown Panel, Skin and Stringer Section 46
40000 FC	16000 FC	53-754-03	Fuselage Circumferential Skin/Stringer Splice (L/N 75 and on)
40000 FC	16000 FC	53-754-04	Fuselage Circumferential Skin/Stringer Splice
40000 FC	16000 FC	53-754-06	Fuselage Circumferential Skin/Stringer Splice



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
40000 FC	16000 FC	53-754-07	Fuselage Circumferential Skin/Stringer Splice
40000 FC	16000 FC	53-757-02	Passenger Entry Door #4 (-300)
40000 FC	16000 FC	53-758-01	Passenger Entry Door #3 (-200)/#4 (-300) Cutout
40000 FC	16000 FC	53-759-01	Passenger Entry Door #3 (-200)/#4 (-300) Cutout
40000 FC	16000 FC	53-764-01	Small Cargo Door - Cutout Inner Chord - Edge Frames STA 1678.5 & STA 1754.5
40000 FC	16000 FC	53-765-01	Small Cargo Door - Cutout Inner Chord - Edge Frames STA 1678.5 & STA 1754.5
40000 FC	16000 FC	53-766-01	Small Cargo Door - Cutout Outer Chord - Edge Frames STA 1678.5 & STA 1754.5
40000 FC	16000 FC	53-767-01	Small Cargo Door - Cutout
40000 FC	16000 FC	53-767-02	Small Cargo Door - Cutout
40000 FC	16000 FC	53-776-01	Passenger Entry Door #4 (-200)/#5 (-300) - Cutout
40000 FC	16000 FC	53-777-01	Passenger Entry Door #4 (-200)/#5 (-300) - Cutout
40000 FC	16000 FC	53-780-01	Bulk Cargo Door - Cutout Edge Frames
40000 FC	16000 FC	53-782-01	Pressure Bulkhead at STA 2150; Sec 48 Circumferential Crack in Web at Radial Stiffener
40000 FC	16000 FC	53-783-02	Pressure Bulkhead, STA 2150, Dome Web Attachment to Y-Ring (L/N 423 and on)
40000 FC	16000 FC	53-784-01	Stabilizer Pivot Bulkhead STA 2370
40000 FC	16000 FC	53-786-01	Stabilizer Pivot Fitting Lug; Section 48
40000 FC	16000 FC	53-787-01	Jackscrew Support Fitting Lug
40000 FC	16000 FC	57-709-03	Wing Center Section (WCS), Lower Panel, Typical Stringer
40000 FC	16000 FC	57-711-03	Wing Center Section, Lower Rear Spar Chord, Lower Chord
40000 FC	16000 FC	57-714-02	Wing Center Section, Lower Panel Keel Beam Chord, Lower Chord
40000 FC	16000 FC	57-714-03	Wing Center Section, Lower Panel Keel Beam Chord, Lower Chord
40000 FC	16000 FC	57-716-02	Wing Outboard, Typical Rear Spar Attachment, Lower Chord
40000 FC	16000 FC	57-719-02	Wing Outboard, Typical Splice Stringers
40000 FC	16000 FC	57-721-01	Wing Outboard, Typical Splice Stringer



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
40000 FC	16000 FC	57-729-01	Wing Outboard, Typical Stringer Attachment at Nacelle Fitting
40000 FC	16000 FC	57-729-06	Wing Outboard, Typical Stringer Attachment at Nacelle Fitting
40000 FC	16000 FC	57-734-01	Wing Outboard, Upper Panel, MLG Beam Support Fitting Upper Skin
40000 FC	16000 FC	57-735-01	Wing Outboard, Upper Panel, Front Spar Upper Chord
40000 FC	16000 FC	57-739-01	Wing Outboard, Upper Panel, Rear Spar Upper Chord
40000 FC	16000 FC	57-751-01	Inboard Main Flap Outboard Closeout Rib
40000 FC	16000 FC	57-752-01	Inboard Main Flap Outboard Ribs
40000 FC	16000 FC	57-761-03	No. 3 and No. 6 Inboard Flap Support Forward Tension Link
40000 FC	16000 FC	57-763-01	No. 3 and No. 6 Inboard Flap Support Aft Tension Beam
40000 FC	16000 FC	57-764-01	No. 3 and No. 6 Inboard Flap Support Aft Tension Beam
40000 FC	16000 FC	57-765-01	No. 3 and No. 6 Inboard Flap Support Aft Tension Beam
40000 FC	16000 FC	57-769-01	No. 3 and No. 6 Inboard Flap Support Carrier Beam
40000 FC	16000 FC	57-778-01	No. 4 and No. 5 Inboard Flap Support Drive Arm
40000 FC	16000 FC	57-779-01	No. 4 and No. 5 Inboard Flap Support Drive Arm
40000 FC	16000 FC	57-780-01	No. 4 and No. 5 Inboard Flap Actuator Support Fitting
40000 FC	16000 FC	57-781-01	No. 4 and No. 5 Inboard Flap Actuator Support Fitting
40000 FC	16000 FC	57-786-01	MLG Forward Trunnion Sideload Fitting
40000 FC	16000 FC	57-788-05	MLG Forward Trunnion Outboard Support Fitting
40000 FC	16000 FC	57-793-02	MLG Drag Brace Support Fitting
40000 FC	16000 FC	57-794-01	MLG Drag Brace Support Fitting, Base of Fitting
40000 FC	16000 FC	57-795-01	MLG Drag Brace Internal Backup Fitting
125 FH	1000 FH	24-040-00	IDG Oil Change
125 FH	1000 FH	24-041-00	IDG Oil Change
125 FH	1000 FH	24-042-00	IDG Oil Change



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
125 FH	1000 FH	24-070-00	IDG Oil Filter
125 FH	1000 FH	24-071-00	IDG Oil Filter
125 FH	1000 FH	24-072-00	IDG Oil Filter
125 FH	1000 FH	24-075-00	IDG Oil Filter
130 FH	130 FH	72-375-01	MCD Inspection
130 FH	130 FH	72-375-02	MCD Inspection
200 FH	200 FH	24-080-00	IDG Oil Filter Element
250 FH	250 FH	24-010-00	IDG Oil Servicing
250 FH	250 FH	24-012-00	IDG Oil Servicing
450 FH	450 FH	24-011-00	IDG OIL Servicing
500 FH	500 FH	24-030-00	VSCF Backup Generator Oil Servicing
500 FH	500 FH	27-160-00	Actuator Control Electronics (ACE)
500 FH	500 FH	71-802-01	Left Engine
500 FH	500 FH	71-814-02	Right Engine
600 FH	600 FH	28-012-00	Interspace drain valves (AUX TANK)
600 FH	600 FH	72-220-01	Low Pressure Compressor Section - Left
600 FH	600 FH	72-220-02	Low Pressure Compressor Section - Right
600 FH	600 FH	72-270-01	Lubrication and Scavage System - Left
600 FH	600 FH	72-270-02	Lubrication and Scavage System - Right
600 FH	600 FH	80-205-01	Starter Oil
600 FH	600 FH	80-205-02	Starter Oil
600 FH	600 FH	80-350-01	Starter Oil
600 FH	600 FH	80-350-02	Starter Oil
600 FH	600 FH	80-355-01	Starter Chip Detector



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
600 FH	600 FH	80-355-02	Starter Chip Detector
700 FH	700 FH	24-120-00	VSCF Backup Generator Differential Pressure Switch
700 FH	700 FH	27-140-00	Primary Flight Computers (PFC)
1000 FH	1000 FH	21-230-00	Ozone Converters
1000 FH	1000 FH	26-035-00	OFCR/OFAR Smoke Detector System
1000 FH	1000 FH	26-068-00	Flight Crew Rest (FCR) or Main Deck Crew Rest (MDCR) Smoke Detection System
1000 FH	1000 FH	32-020-00	Brake Accumulator
1000 FH	1000 FH	72-376-01	Restore (Clean) Master Electric Chip Detector (active DMS) Left Engine
1000 FH	1000 FH	72-376-02	Restore (Clean) Master Electric Chip Detector (active DMS) Right Engine
1000 FH	1000 FH	80-210-01	Starter Chip Detector
1000 FH	1000 FH	80-210-02	Starter Chip Detector
1200 FH	1200 FH	72-235-01	Fan Case Section - Left
1200 FH	1200 FH	72-235-02	Fan Case Section - Right
1400 FH	1400 FH	35-160-00	Portable Oxygen Equipment Pressure
1400 FH	1400 FH	35-161-00	Portable oxygen disposable type masks
1500 FH	1500 FH	28-080-00	Fuel Quantity Processor Unit (FQPU)
1500 FH	1500 FH	33-060-00	Emergency Lights
1500 FH	1500 FH	33-070-00	Emergency Lights
1500 FH	1500 FH	79-390-01	Replace Scavenge Oil Filter
1500 FH	1500 FH	79-390-02	Replace Scavenge Oil Filter
1500 FH	3000 FH	29-080-00	Hydraulic System ACMP Pressure and Case Drain Filter Module
2000 FH	2000 FH	25-066-00	Off-Wing Inflation Cylinder Pressure
2000 FH	2000 FH	25-230-00	Slide/Raft Inflation Cylinder Pressure
2000 FH	2000 FH	26-014-01	Passenger Cabin, High Wall Suites Smoke Detector System



INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
2000 FH	2000 FH	26-030-00	Lavatory and Overhead Cross-Aisle Stowage (If Installed) Smoke Detector Circuitry
2000 FH	2000 FH	35-040-00	Crew Oxygen Mask, Diluter Demand Regulator, and Microphone
2000 FH 600 FC	2000 FH 600 FC	72-206-01	Turbine Section - Left
2000 FH 600 FC	2000 FH 600 FC	72-206-02	Turbine Section - Right
2000 FH 600 FC	2000 FH 600 FC	72-207-01	Turbine Section - Left
2000 FH 600 FC	2000 FH 600 FC	72-207-02	Turbine Section - Right
2000 FH 600 FC	2000 FH 600 FC	72-211-01	Diffuser Case Section - Left
2000 FH 600 FC	2000 FH 600 FC	72-211-02	Diffuser Case Section - Right
2000 FH 600 FC	2000 FH 600 FC	72-212-01	Diffuser Case Section - Left
2000 FH 600 FC	2000 FH 600 FC	72-212-02	Diffuser Case Section - Right
2000 FH	2000 FH	80-005-01	Inspect Starter Chip Detector - Left
2000 FH	2000 FH	80-005-02	Inspect Starter Chip Detector - Right
2000 FH	4000 FH	29-060-00	Hydraulic System EDP Pressure and Case Drain Filter Module
2000 FH	5000 FH	29-100-00	ADP Pressure and Case Drain Filter Module
2500 FH	2500 FH	72-020-01	Check for Bearing and Gear Degradation - Left
2500 FH	2500 FH	72-020-02	Check for Bearing and Gear Degradation - Right
2500 FH	2500 FH	72-021-01	Check for Bearing and Gear Degradation - Left
2500 FH	2500 FH	72-021-02	Check for Bearing and Gear Degradation - Right
3000 FH 400 DY	3000 FH 400 DY	12-006-00	Stabilizer Trim Ballscrew and Ballscrew Actuator
3000 FH	3000 FH	12-020-00	Wing Inboard Spoilers PCU's, Center Hinges and Hinge Links



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
3000 FH	3000 FH	12-022-00	Wing Outboard Spoiler PCU's, Center Hinges and Hinge Links
3000 FH	3000 FH	20-540-01	Trent Electronic Engine Control System Wire Runs
3000 FH	3000 FH	20-540-02	Trent Electronic Engine Control System Wire Runs
3000 FH	3000 FH	21-036-00	Lavatory/Galley and Alternate Ventilation System (LGVS and AVS)
3000 FH	3000 FH	24-050-00	VSCF Backup Generator Oil and Filter Change
3000 FH	3000 FH	24-090-00	IDG QAD Coupler
3000 FH	3000 FH	24-091-00	IDG QAD Coupler
3000 FH	3000 FH	24-092-00	IDG QAD Coupler
3000 FH	3000 FH	71-800-01	Left Powerplant
3000 FH	3000 FH	71-804-01	Inlet Cowl - Left Engine
3000 FH	3000 FH	71-806-01	Left Engine Fan Cows
3000 FH	3000 FH	71-808-01	Left Engine Thrust Reversers
3000 FH	3000 FH	71-812-02	Right Powerplant
3000 FH	3000 FH	71-816-02	Inlet Cowl - Right Engine
3000 FH	3000 FH	71-818-02	Right Engine Fan Cows
3000 FH	3000 FH	71-820-02	Right Engine Thrust Reversers
3000 FH	3000 FH	71-830-01	Left Powerplant - From the Ground
3000 FH	3000 FH	71-832-01	Left Powerplant
3000 FH	3000 FH	71-836-01	Inlet Cowl - Left Engine
3000 FH	3000 FH	71-838-01	Left Engine Fan Cows
3000 FH	3000 FH	71-840-01	Left Engine Thrust Reversers
3000 FH	3000 FH	71-844-02	Right Powerplant - From the Ground
3000 FH	3000 FH	71-846-02	Right Powerplant
3000 FH	3000 FH	71-850-02	Inlet Cowl - Right Engine



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
3000 FH	3000 FH	71-852-02	Right Engine Fan Cowls
3000 FH	3000 FH	71-854-02	Right Engine Thrust Reversers
3000 FH	3000 FH	71-860-01	Left Powerplant - From the Ground
3000 FH	3000 FH	71-866-01	Inlet Cowl - Left Engine
3000 FH	3000 FH	71-868-01	Left Engine Fan Cowls
3000 FH	3000 FH	71-870-01	Left Engine Thrust Reversers
3000 FH	3000 FH	71-874-02	Right Powerplant - From the Ground
3000 FH	3000 FH	71-880-02	Inlet Cowl - Right Engine
3000 FH	3000 FH	71-882-02	Right Engine Fan Cowls
3000 FH	3000 FH	71-884-02	Right Engine Thrust Reversers
3000 FH	3000 FH	77-005-01	Inspect for EGT System Degradation - Left
3000 FH	3000 FH	77-005-02	Inspect for EGT System Degradation - Right
3000 FH	6000 FH	29-050-00	Hydraulic System Return Filter Module
3700 FH	3700 FH	73-011-00	Engine Fuel
4000 FH	4000 FH	21-050-00	Equipment Cooling Air Filter
4000 FH	4000 FH	23-070-00	Voice Recorder System
4000 FH	4000 FH	33-010-00	Flight Compartment Panel Flood Lights
4000 FH	4000 FH	33-020-00	Integral Panel Lights
4000 FH	4000 FH	33-030-00	Integral Panel Lights
4000 FH	4000 FH	33-040-00	Indicator Lights DIM/BRT Relays
4000 FH	4000 FH	35-020-00	Crew Oxygen System
4000 FH	4000 FH	73-055-01	Inspect Detailed Fuel Filter
4000 FH	4000 FH	73-055-02	Inspect Detailed Fuel Filter
4000 FH	4000 FH	73-210-01	Fuel Pump Filter Element - Left



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
4000 FH	4000 FH	73-210-02	Fuel Pump Filter Element - Right
5000 FH	5000 FH	38-080-00	Waste Tank Quantity Indication System
5000 FH	5000 FH	72-377-01	Functionally Check Master Electric Chip Detector (active DMS) Left Engine
5000 FH	5000 FH	72-377-02	Functionally Check Master Electric Chip Detector (active DMS) Right Engine
5000 FH 1000 FC	5000 FH 1000 FC	72-410-01	Borescope Combustor
5000 FH 1000 FC	5000 FH 1000 FC	72-410-02	Borescope Combustor
5000 FH 1000 FC	5000 FH 1000 FC	72-415-01	Borescope Turbine Blades
5000 FH 1000 FC	5000 FH 1000 FC	72-415-02	Borescope Turbine Blades
5000 FH 1000 FC	5000 FH 1000 FC	72-445-01	Borescope Nozzle Guide Vanes
5000 FH 1000 FC	5000 FH 1000 FC	72-445-02	Borescope Nozzle Guide Vanes
5000 FH	5000 FH	78-025-01	Thrust Reverser Sync Lock- Left
5000 FH	5000 FH	78-025-02	Thrust Reverser Sync Lock - Right
5000 FH	5000 FH	78-220-01	Operationally Check Sync Lock on Thrust Reverser
5000 FH	5000 FH	78-220-02	Operationally Check Sync Lock on Thrust Reverser
5000 FH	5000 FH	78-365-01	Thrust Reverser Sync Lock
5000 FH	5000 FH	78-365-02	Thrust Reverser Sync Lock
6000 FH 560 DY	6000 FH 560 DY	12-002-01	Elevator Power Control Actuators and Elevator Hinges
6000 FH 560 DY	6000 FH 560 DY	12-004-00	Rudder and Rudder Tab Hinge Bearings, PCU'S Reaction Link Rod Ends and PCU Rod Ends
6000 FH 560 DY	6000 FH 560 DY	12-024-00	Wing Aileron Power Control Units (PCUs) and Hinges



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
6000 FH 560 DY	6000 FH 560 DY	12-026-00	Wing Flaperon Power Control Units (PCU's) Rod Ends, Hinge Fittings and PCU Yoke Assemblies (if installed)
6000 FH	6000 FH	20-500-01	GE90 FADEC Control System Wires Detail Inspection
6000 FH	6000 FH	20-500-02	GE90 FADEC Control System Wires Detail Inspection
6000 FH	6000 FH	21-030-00	Galley Ventilation Filters
6000 FH	6000 FH	21-080-00	Outflow Valve Manual Control
6000 FH 400 DY	6000 FH 400 DY	27-450-00	Stabilizer Trim Ballscrew, Ballnut, and Ballnut Return Tubes
6000 FH	6000 FH	28-085-00	Center Wing Fuel Tank FQIS Wiring
6000 FH	6000 FH	31-040-00	Airplane Information Management System
6000 FH	6000 FH	35-230-00	Supernumerary Oxygen System Pressure Indications
6000 FH	6000 FH	36-020-00	Engine Air Supply IP Check Valve - Left and Right
6000 FH	6000 FH	36-022-00	Engine Air Supply IP Check Valve - Left and Right
6000 FH	6000 FH	36-024-00	Engine Air Supply IP Check Valve - Left and Right
6500 FH NOTE	6500 FH NOTE	79-385-01	Restore Oil Pressure Filter
6500 FH NOTE	6500 FH NOTE	79-385-02	Restore Oil Pressure Filter
7500 FH	3500 FH	78-030-01	Operationally Check DCV and Locking Sensors - Left
7500 FH	3500 FH	78-030-02	Operationally Check DCV and Locking Sensors - Right
7500 FH	7500 FH	12-114-00	Ram Air Turbine (RAT) Actuator Strut and Door Actuation Link
7500 FH	7500 FH	20-520-01	PW4000 Electronic Engine Control System Wire Run
7500 FH	7500 FH	20-520-02	PW4000 Electronic Engine Control System Wire Run
7500 FH	7500 FH	21-010-00	Upper Recirculation Air Filters
7500 FH	7500 FH	21-020-00	Lower Recirculation Air Filters
7500 FH	7500 FH	21-033-00	Main Deck Alerting System



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
7500 FH	7500 FH	21-100-00	Cabin Pressure Control Outflow Valves
7500 FH	7500 FH	21-190-00	AC Pack Condenser Low Limit Valves
7500 FH	7500 FH	21-200-00	AC Pack 2nd Stage Turbine Bypass Valves
7500 FH	7500 FH	21-220-00	Cabin Air Conditioning and Temperature Controllers
7500 FH	7500 FH	25-070-00	Lavatory Waste Compartment Doors & Flaps
7500 FH	7500 FH	25-250-00	Overhead Flight Crew Rest (OFCR) Seat Assembly Lanyard
7500 FH	7500 FH	26-010-00	Engine Fire/Overheat Detection
7500 FH	7500 FH	26-014-02	Passenger Cabin, High Wall Suites Smoke Detectors System
7500 FH	7500 FH	26-014-03	Passenger Cabin, High Wall Suites Smoke Detector System
7500 FH	7500 FH	26-015-00	APU Fire Detection Control Cards
7500 FH	7500 FH	26-040-00	Lavatory and Overhead Cross-Aisle Stowage (If Installed) Smoke Detectors
7500 FH	7500 FH	26-069-00	Flight Crew Rest (FCR) or Main Deck Crew Rest (MDCR) Smoke Detection System
7500 FH	7500 FH	26-190-00	Cargo Fire Extinguishing Bottle Pressure Switches
7500 FH	7500 FH	27-010-00	Stabilizer Primary Brake Housing
7500 FH	7500 FH	27-415-00	Nose Gear Pressure Transducer
7500 FH	7500 FH	28-020-00	Engine Fuel Suction Feed System
7500 FH	7500 FH	28-025-00	Engine Fuel Spar Valve
7500 FH	7500 FH	28-060-00	Densitometers of Fuel Quantity Indicating System
7500 FH	7500 FH	28-070-00	Tank Units of Fuel Quantity Indicating System
7500 FH	7500 FH	28-090-00	Fuel Tanks Microbial Growth
7500 FH	7500 FH	29-010-00	Air Drive Unit
7500 FH	7500 FH	29-150-00	Ram Air Turbine
7500 FH	7500 FH	29-160-00	Ram Air Turbine
7500 FH	7500 FH	29-170-00	Ram Air Turbine



INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
7500 FH	7500 FH	32-120-00	Landing Gear Alternate Extension System
7500 FH 560 DY	7500 FH 560 DY	35-050-00	Crew Oxygen Masks
7500 FH	7500 FH	36-030-00	Air Supply Manifold Dual Temperature Sensor
7500 FH	7500 FH	38-050-00	Waste Tank Liquid Separators
7500 FH	7500 FH	38-070-00	Vacuum Blower Air Filter
7500 FH	7500 FH	38-100-00	Compressor Inlet Filter
7500 FH	7500 FH	38-110-00	APU Duct Bleed Air Inline Filter
7500 FH	7500 FH	54-800-01	Left Nacelle Strut
7500 FH	7500 FH	54-810-02	Right Nacelle Strut
7500 FH	7500 FH	54-820-01	Left Nacelle Strut
7500 FH	7500 FH	54-830-02	Right Nacelle Strut
7500 FH	7500 FH	54-840-01	Left Nacelle Strut
7500 FH	7500 FH	54-850-02	Right Nacelle Strut
7500 FH	7500 FH	71-810-01	Left Engine Thrust Reversers
7500 FH	7500 FH	71-822-02	Right Engine Thrust Reversers
7500 FH	7500 FH	71-834-01	Left Engine
7500 FH	7500 FH	71-842-01	Left Engine Thrust Reversers
7500 FH	7500 FH	71-848-02	Right Engine
7500 FH	7500 FH	71-856-02	Right Engine Thrust Reversers
7500 FH	7500 FH	71-862-01	Left Powerplant
7500 FH	7500 FH	71-864-01	Left Engine
7500 FH	7500 FH	71-872-01	Left Engine Thrust Reversers
7500 FH	7500 FH	71-876-02	Right Powerplant



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
7500 FH	7500 FH	71-878-02	Right Engine
7500 FH	7500 FH	71-886-02	Right Engine Thrust Reversers
7500 FH	7500 FH	72-083-01	Detailed Inspection of TRF AFT Engine Mount Lugs- Left
7500 FH	7500 FH	72-083-02	Detailed Inspection of TRF AFT Engine Mount Lugs - Right
7500 FH	7500 FH	72-350-01	Fan Blade Inspection
7500 FH	7500 FH	72-350-02	Fan Blade Inspection
7500 FH	7500 FH	72-385-01	Inspect Detailed Kevlar
7500 FH	7500 FH	72-385-02	Inspect Detailed Kevlar
7500 FH	7500 FH	72-390-01	General Visual of the Splitter Fairing
7500 FH	7500 FH	72-390-02	General Visual of the Splitter Fairing
7500 FH	7500 FH	73-350-01	Discard LP Fuel Filter
7500 FH	7500 FH	73-350-02	Discard LP Fuel Filter
7500 FH	7500 FH	78-215-01	Thrust Reverser System
7500 FH	7500 FH	78-215-02	Thrust Reverser System
7500 FH	7500 FH	78-225-01	Inspect Detailed T/R Blocker Door Hinge and Drag Link Attachments - Left
7500 FH	7500 FH	78-225-02	Inspect Detailed T/R Blocker Door Hinge and Drag Link Attachments - Right
7500 FH	7500 FH	78-350-01	Inspect Detailed Thrust Reverser Blocker Door Hinge and Drag Link Attachments
7500 FH	7500 FH	78-350-02	Inspect Detailed Thrust Reverser Blocker Door Hinge and Drag Link Attachments
7500 FH	7500 FH	78-375-01	Inspect Fire Seal
7500 FH	7500 FH	78-375-02	Inspect Fire Seal
7500 FH	7500 FH	79-010-01	Inspect Oil Filter Scavenge Screen - Left
7500 FH	7500 FH	79-010-02	Inspect Oil Filter Scavenge Screen - Right
7500 FH	11500 FH	29-120-00	Air Drive Unit (ADU) and ADU Heater System
8000 FH	8000 FH	27-410-00	Nose Gear Pressure Switch



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
9000 FH	9000 FH	21-260-00	Lower Recirculation Air Fan Check Valves
9000 FH	9000 FH	38-140-00	Fill Line Water Filter of Pump Based Potable Water System
10000 FH	10000 FH	21-052-00	IFE Cooling Smoke Detector
10000 FH	10000 FH	21-210-00	AC Pack Secondary Heat Exchangers Outlet Temperature Sensor
10000 FH	10000 FH	22-040-00	Take-Off/ Go-Around (TO/GA) Switch
10000 FH	10000 FH	25-020-04	Flight Compartment Seat Harness
10000 FH	10000 FH	25-020-06	Flight Compartment Seat Inertial Reel
10000 FH	10000 FH	29-180-00	Hydraulic Accumulators
10000 FH	10000 FH	35-260-00	Supernumerary Stowage Box and Mask Regulator
10000 FH	10000 FH	35-270-00	Supernumerary Oxygen Mask and Diluter Demand Regulator
10000 FH	10000 FH	35-280-00	Supernumerary Oxygen Masks
10000 FH	10000 FH	38-090-00	Waste Tank Quantity Indication
10000 FH	10000 FH	53-928-00	APU Compartment
10000 FH	10000 FH	72-090-01	Detailed Inspection ACC GB. and Fittings - Left
10000 FH	10000 FH	72-090-02	Detailed Inspection ACC GB. and Fittings - Right
10000 FH	10000 FH	78-015-01	Thrust Reverser Bullnose Seal
10000 FH	10000 FH	78-015-02	Thrust Reverser Bullnose Seal
10000 FH	10000 FH	78-020-01	Thrust Reverser Locks - Left
10000 FH	10000 FH	78-020-02	Thrust Reverser Locks - Right
10000 FH	10000 FH	78-205-01	Thrust Reverser Bullnose Seal - Left
10000 FH	10000 FH	78-205-02	Thrust Reverser Bullnose Seal - Right
10000 FH	10000 FH	78-355-01	Thrust Reverser Bullnose Seal
10000 FH	10000 FH	78-355-02	Thrust Reverser Bullnose Seal
10000 FH	10000 FH	78-360-01	Thrust Reverser Locks



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
10000 FH	10000 FH	78-360-02	Thrust Reverser Locks
10000 FH	15000 FH	25-010-00	Crew Seat Attachments
12000 FH	12000 FH	21-140-00	AC Pack Flow Sensors
12000 FH	12000 FH	21-150-00	AC Pack Heat Exchangers
12000 FH	12000 FH	23-085-00	Voice recorder back up power system
12000 FH	12000 FH	25-030-00	Passenger Compartment Seats
12000 FH	12000 FH	25-040-00	Passenger Seat Belts
12000 FH	12000 FH	26-045-00	OFCR/OFAR Smoke Detector System
12000 FH	12000 FH	28-045-00	EFLI tank circuits (AUX TANK)
12000 FH	12000 FH	28-045-10	EFLI tank unit (AUX TANK)
12000 FH	12000 FH	28-045-20	EFLI Processor Display Unit (AUX TANK)
12000 FH	12000 FH	29-040-00	Center Hydraulic System Return Filter Module
12000 FH	12000 FH	29-070-00	Hydraulic System EDP Pressure and Case Drain Filter Module
12000 FH	12000 FH	29-090-00	Hydraulic System ACMP Pressure and Case Drain Filter Module
12000 FH	12000 FH	29-130-00	Center Hydraulic Isolation System
12000 FH	12000 FH	78-210-01	Thrust Reverser System
12000 FH	12000 FH	78-210-02	Thrust Reverser System
14000 FH 1000 DY	14000 FH 1000 DY	24-201-00	Airplane External Power Receptacle Neutral Pin Continuity to Airframe Ground
15000 FH	7500 FH	21-060-00	E11 Rack Satcom Backup Fan Check Valves
15000 FH	7500 FH	21-065-00	E13 Rack Satcom Backup Fan Check Valves
15000 FH	7500 FH	25-130-00	Emergency Evacuation Signal System
15000 FH	9000 FH	78-010-01	Inspect Detailed T/R Blocker Door Hinges, Drag Links and Attachments - Left
15000 FH	9000 FH	78-010-02	Inspect Detailed T/R Blocker Door Hinges, Drag Links and Attachments - Right



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
15000 FH	12000 FH	23-030-00	Passenger Address System
15000 FH	12000 FH	32-140-00	Alternate Source Select Valve
15000 FH	15000 FH	20-070-00	Exposed, Unprotected Brake Control Cables in the Wheel Well
15000 FH	15000 FH	21-070-00	E11 Rack Satcom Backup Cooling Check Valve
15000 FH	15000 FH	21-075-00	E13 Rack Satcom Backup Cooling Check Valve
15000 FH	15000 FH	21-090-00	Landing Altitude Manual Select Switch
15000 FH	15000 FH	21-105-00	Cabin Pressure Control Outflow Valves
15000 FH	15000 FH	21-240-00	Ozone Converters
15000 FH	15000 FH	23-020-00	Passenger Address System
15000 FH	15000 FH	23-040-00	Cabin Interphone System Alternate Channel
15000 FH	15000 FH	23-050-00	Flight Interphone System - Audio Transfer
15000 FH	15000 FH	25-020-00	Crew Seat Lock Mechanism
15000 FH	15000 FH	25-045-00	Crew and/or Attendant Rest Bunk Belts
15000 FH	15000 FH	25-050-00	Passenger Compartment Seats
15000 FH	15000 FH	25-060-00	Attendant Seat Restraint
15000 FH	15000 FH	26-020-00	Duct Leak & Overheat Detection Control Card
15000 FH	15000 FH	26-050-00	Wheel Well Fire Detection Sensing Element
15000 FH	15000 FH	26-060-00	Duct Leak and Overheat Detection Sensing Element
15000 FH	15000 FH	26-061-00	Lower Lobe Attendant Rest (LLAR) Smoke Detection System
15000 FH	15000 FH	26-066-00	Cargo Smoke Detector Water Separators
15000 FH	15000 FH	26-067-00	Cargo Compartment Smoke Detector Heaters and Controllers
15000 FH	15000 FH	27-200-00	Rudder Power Control Units
15000 FH	15000 FH	27-230-00	Column Force Transducer
15000 FH	15000 FH	27-250-00	Alternate Stabilizer Trim Control System



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
15000 FH	15000 FH	27-260-00	Stabilizer Cutout Switches
15000 FH	15000 FH	27-310-00	High Lift System Alternate Control Switches
15000 FH	15000 FH	29-110-00	ADP Pressure and Case Drain Filter Module
15000 FH	15000 FH	29-140-00	Hydraulic System Reservoir Pressurization Module
15000 FH	15000 FH	30-010-00	Flight Compartment No. 1 Window Backup Anti-Fog
15000 FH	15000 FH	31-050-00	Airplane Information Management System - Coaxial Splitter
15000 FH	15000 FH	31-060-00	Warning Electronic System
15000 FH	15000 FH	31-070-00	Primary Display System - Inboard Select Switching
15000 FH	15000 FH	31-080-00	Primary Display System - Instrument Source Select Switching
15000 FH	15000 FH	31-090-00	Primary Display System - Display Control Switches
15000 FH	15000 FH	32-150-00	Accumulator Isolation Valve
15000 FH	15000 FH	38-130-00	Potable Water System Pressure Limit Switch and Relay Circuit
15000 FH	15000 FH	47-100-00	Restore the Ozone Converter (off-aircraft).
15000 FH	15000 FH	47-110-00	Clean the Primary Heat Exchanger (off-aircraft).
15000 FH	15000 FH	47-120-00	Functionally check the Regenerative Heat Exchanger (off-aircraft).
15000 FH	15000 FH	47-130-00	Functionally Check the Filter Differential Pressure Sensor Switch (off-aircraft).
15000 FH	15000 FH	47-140-00	Visually Check for Fluid Accumulation Through the Drain Valve or Drain Cap.
15000 FH	15000 FH	47-150-00	Inspect (detailed) the Nitrogen Enriched Air (NEA) distribution lines
15000 FH	15000 FH	72-080-01	Detailed Inspection of TRF AFT Engine Mount Lugs- Left
15000 FH	15000 FH	72-080-02	Detailed Inspection of TRF AFT Engine Mount Lugs - Right
15000 FH	15000 FH	72-240-01	Kevlar Inspection on Fan Case - Left
15000 FH	15000 FH	72-240-02	Kevlar Inspection on Fan Case - Right
15000 FH	15000 FH	72-245-01	Fan Case Section - Left
15000 FH	15000 FH	72-245-02	Fan Case Section - Right



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
15000 FH	15000 FH	72-400-01	General Visual of OGV's
15000 FH	15000 FH	72-400-02	General Visual of OGV's
15000 FH	15000 FH	78-370-01	Thrust Reverser Sensor Checks
15000 FH	15000 FH	78-370-02	Thrust Reverser Sensor Checks
15000 FH	15000 FH	78-380-01	Inspect Thrust Reverser Hinges
15000 FH	15000 FH	78-380-02	Inspect Thrust Reverser Hinges
16000 FH	16000 FH	28-040-00	Defuel Valve Actuator
18000 FH	18000 FH	21-037-00	Lav/Galley Ventilation System (LGVS)
18000 FH	18000 FH	21-048-00	E/E Cooling System Override Switch
18000 FH	18000 FH	21-055-00	Condenser/Reheater
18000 FH	18000 FH	21-110-00	Cabin Positive Pressure Relief Valves
18000 FH	18000 FH	21-120-00	Cabin Positive Pressure Relief Filters
18000 FH	18000 FH	21-134-00	Aft Cargo Overheat Protection Switch & Relay
18000 FH	18000 FH	23-010-00	Passenger Address System
18000 FH	18000 FH	23-060-00	Static Dischargers
18000 FH	18000 FH	26-070-00	Engine Fire Extinguishing Bottle Pressure Switches
18000 FH	18000 FH	26-090-00	Engine Fire Switches
18000 FH	18000 FH	26-140-00	APU Fire Extinguishing Bottle Pressure Switch
18000 FH	18000 FH	26-200-00	Cargo Fire Extinguishing Arm & Discharge Switches
18000 FH	18000 FH	26-201-00	Main Deck Cargo Fire Extinguishing ARM and DEPRESSURIZATION Switches
18000 FH	18000 FH	27-240-00	Elevator Power Control Unit Bearings
18000 FH	18000 FH	27-360-00	Leading Edge Slat Skew/Loss Cable - Left and Right
18000 FH	18000 FH	27-430-00	Rudder Power Control Unit
18000 FH	18000 FH	28-050-10	Fuel Scavenge System



INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
18000 FH	18000 FH	29-030-00	Hydraulic System Gross Internal Leakage
18000 FH	18000 FH	32-160-00	Brake Accumulator
18000 FH	18000 FH	35-130-00	Therapeutic Oxygen System
18000 FH	18000 FH	35-140-00	Passenger/ Supernumerary Gaseous Oxygen System Flow Control Units
18000 FH	18000 FH	38-030-00	Waste Drain Ball Valve & Fitting Seals
20000 FH	20000 FH	25-020-02	Flight Crew Seat Manual Adjustments
20000 FH	20000 FH	27-170-00	Wing Aileron and Flaperon System Hydraulic Fuses
24000 FH	24000 FH	20-010-00	Primary Flight Control and Brake Control Cables Turns
24000 FH	24000 FH	20-012-00	Nose Gear Steering Control Cable Turns
24000 FH	24000 FH	20-015-00	Primary Flight Control and Brake Control Cables - straight runs
24000 FH	24000 FH	20-018-00	Nose Gear Steering Control Cables - straight runs
24000 FH	24000 FH	20-110-00	Primary Flight Control Cables - PROTECTED/UNPROTECTED UNPRESSURIZED AREAS
24000 FH	24000 FH	21-034-00	Alternate Ventilation System (AVS)
24000 FH	24000 FH	21-130-00	AFT and Bulk Cargo Temperature Selector Switches
24000 FH	24000 FH	21-132-00	AFT Cargo Temperature Selector Switch
24000 FH	24000 FH	21-133-00	Aft Cargo Air Conditioning (ACAC)/Aft Lower Cargo Temperature Selector Switch
24000 FH	24000 FH	27-055-00	Flap Transmission No Back Brakes
24000 FH	24000 FH	27-180-00	Rudder Check Valve
24000 FH	24000 FH	27-220-00	Elevator Power Control Units
24000 FH	24000 FH	27-320-00	Wing TE Flap No-Back Brakes - Left and Right
24000 FH	24000 FH	27-350-00	Autoslat Priority Valves - Main Landing Gear
24000 FH	24000 FH	28-050-00	Fuel Jettison System
24000 FH LDG CNG	24000 FH LDG CNG	32-130-00	Landing Gear Downlock Springs and Gear Release Hooks



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
24000 FH	24000 FH	32-170-00	Normal and Alternate Brake Systems
24000 FH	24000 FH	35-110-00	Passenger Gaseous Oxygen System Pressure Lines
24000 FH	24000 FH	35-220-00	Supernumerary Oxygen System Pressure Decay
24000 FH	24000 FH	36-010-00	Engine Air Supply Manifold
24000 FH	24000 FH	38-120-00	Potable Water Pressure Relief Valve
25000 FH 1875 DY	25000 FH 1875 DY	27-440-00	Stabilizer Freeplay
30000 FH	30000 FH	21-054-00	IFE Cooling System Air Supply Multi-holed Orifices
30000 FH	30000 FH	47-160-00	Operationally check the center tank vent cross flow check valve.
36000 FH	36000 FH	21-131-00	AFT/Bulk Cargo Overheat Protection Switch & Relay
36000 FH	36000 FH	21-180-00	AC Pack Conditioned Air Check Valves
36000 FH	36000 FH	26-100-00	Engine Fire Extinguishing Distribution Lines
36000 FH	36000 FH	26-150-00	APU Fire Switch
36000 FH	36000 FH	26-210-00	Cargo Fire Extinguishing Tubing
36000 FH	36000 FH	27-150-00	Primary Flight Computer Disconnect Switch
36000 FH	36000 FH	27-190-00	Wheel Jam Breakout Mechanism
36000 FH	36000 FH	27-210-00	Control Column Breakout Mechanism
36000 FH	36000 FH	27-270-00	Stabilizer Secondary Brakes
36000 FH	36000 FH	27-280-00	Stabilizer Trim Limit Switches
36000 FH	36000 FH	27-330-00	Auto Speedbrake Function
36000 FH	36000 FH	27-340-00	Leading Edge Slat No-Back Brakes - Left and Right
36000 FH	36000 FH	27-400-00	Aileron Trim Inhibit Operational Check
36000 FH	36000 FH	27-420-00	Rudder Pedal Pogo
36000 FH	36000 FH	28-030-00	APU Fuel Supply Line And Shroud



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
36000 FH	36000 FH	32-180-00	Main Landing Gear Antiskid Module Hydraulic Fuses - Left and Right
48000 FH	48000 FH	28-010-00	Fuel Vent Float Valves
108000 FH	108000 FH	47-135-00	Functional Check of the NGS thermal switch
24 HR	24 HR	31-100-00	Fire Warning System
48 HR	48 HR	32-010-00	Tires
72 HR	72 HR	32-190-00	Wheels
72 HR	72 HR	32-200-00	Tires
IDG CNG ENG CNG	IDG CNG ENG CNG	24-060-00	Generator Drive Disconnect
IDG CNG ENG CNG	IDG CNG ENG CNG	24-061-00	Generator Drive Disconnect
IDG CNG ENG CNG	IDG CNG ENG CNG	24-062-00	Generator Drive Disconnect
LIF LIM	LIF LIM	23-090-00	Voice Recorder - Underwater Locator Beacon
LIF LIM	LIF LIM	25-069-00	Off-Wing Slide Inflation Cylinder Squib Cartridges
LIF LIM	LIF LIM	25-180-00	Smokehoods
LIF LIM	LIF LIM	26-130-00	Engine Fire Bottle Squib Cartridges
LIF LIM	LIF LIM	26-180-00	APU Fire Bottle Squib Cartridges
LIF LIM	LIF LIM	26-240-00	Cargo Compartment Fire Extinguishing Bottle SQUIB Cartridges
LIF LIM	LIF LIM	26-260-00	Cargo Fire Extinguishing Flow Valve Squib Cartridges
LIF LIM	LIF LIM	27-370-00	Spoiler Auxiliary Retract Device (SARD) Pyrotechnic Cartridge
LIF LIM	LIF LIM	31-020-00	Flight Data Recorder System
LIF LIM	LIF LIM	35-080-00	Passenger Chemical Oxygen Generators
LIF LIM	LIF LIM	35-081-00	Lavatory oxygen Constant Dispensing System (CDS) cylinder discard.
LIF LIM	LIF LIM	35-163-00	Portable oxygen cylinders



INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
LIF LIM	LIF LIM	35-164-00	Crew Oxygen Cylinders
LIF LIM	LIF LIM	49-020-00	APU 1st & 2ND Stage Compressor Impellers
LIF LIM	LIF LIM	49-030-00	APU Turbine Wheels
LIF LIM	LIF LIM	49-040-00	APU Load Compressor Impeller
LIF LIM	LIF LIM	52-070-00	Passenger Entry Door EPAS SQUIBS
LIF LIM	LIF LIM	52-070-01	Passenger Entry Door EPAS SQUIBS
LIF LIM	LIF LIM	52-070-02	Passenger Entry Door EPAS SQUIBS
LIF LIM	LIF LIM	52-075-00	No. 3 Over-Wing Door EPAS Squibs
LIF LIM	LIF LIM	72-010-00	Discard Fan Disk and Booster Spool
LIF LIM	LIF LIM	72-015-00	Discard Fan Shaft
LIF LIM	LIF LIM	72-035-00	Discard HPC Stage 1 Disk/Shaft
LIF LIM	LIF LIM	72-040-00	Discard HPC Stage 2 thru 6 Spool
LIF LIM	LIF LIM	72-045-00	Discard HPC Stage 7 Disk
LIF LIM	LIF LIM	72-050-00	Discard HPC Stage 8 thru 10 Spool
LIF LIM	LIF LIM	72-055-00	Discard CDP Seal
LIF LIM	LIF LIM	72-070-00	Discard HPT Stage 1 and 2 Disks and Seals
LIF LIM	LIF LIM	72-075-00	Discard LPT Shaft, LPT Cone Shaft and LPT Stage 1 thru 6 Disks
LIF LIM	LIF LIM	72-225-00	Discard Fan Hub & LPC Drum Rotor
LIF LIM	LIF LIM	72-250-00	Discard Front HUB, 5th Disk, Drum Rotor/Drive Turbine Shaft
LIF LIM	LIF LIM	72-255-00	Discard HUBS, ROTATING AIRSEAL, AND BLADE RETAINING PLATES
LIF LIM	LIF LIM	72-260-00	Discard LPC/LPT COUPLING
LIF LIM	LIF LIM	72-265-00	Discard Disks, Rotating Airseals and Shafts
LIF LIM	LIF LIM	72-355-00	Discard LPC Disk
LIF LIM	LIF LIM	72-360-00	Discard LPC Shaft



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
LIF LIM	LIF LIM	72-365-00	Discard Fan Shaft
LIF LIM	LIF LIM	72-380-00	Discard IPC Rear Stubshaft
LIF LIM	LIF LIM	72-405-00	Discard HPC Shaft/Assemblies
LIF LIM	LIF LIM	72-420-00	Discard HPT Disk
LIF LIM	LIF LIM	72-425-00	Discard IPT Disk
LIF LIM	LIF LIM	72-430-00	Discard IPT Shaft
LIF LIM	LIF LIM	72-435-00	Discard IPT Disks
LIF LIM	LIF LIM	72-440-00	Discard LPT Shaft
18 MO	18 MO	24-160-01	APU Battery Charge Capacity
18 MO	18 MO	24-170-01	Main Battery Charge Capacity
18 MO 6000 FH	18 MO 6000 FH	26-235-00	Cargo Fire Extinguishing Bottles
NAT REQ	NAT REQ	38-010-00	Potable Water Supply System
NOTE	NOTE	21-170-00	AC Pack Fan Bypass Check Valve
NOTE	NOTE	23-110-00	Emergency Locator Transmitter
NOTE	NOTE	23-120-00	Emergency Locator Transmitter
NOTE	NOTE	25-240-00	Passenger Entry Door Emergency Escape Slide
NOTE	NOTE	26-270-00	Lavatory Waste Compartment Fire Extinguisher Bottles
NOTE	NOTE	26-276-00	LLAR Fire Extinguishing Tubing
NOTE	NOTE	53-757-03	Passenger Entry Door #3 (-200ER)
NOTE	NOTE	53-757-04	Passenger Entry Door #3 (-200ER)
NOTE	NOTE	54-703-03	Strut Side Skin (PW)
NOTE	NOTE	54-703-04	Strut Side Skin (PW)
NOTE	NOTE	54-710-03	Upper Spar Bay 3 (GE)



INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
NOTE	NOTE	54-710-04	Upper Spar Bay 3 (GE)
NOTE	NOTE	54-711-03	Strut Upper Spar Bay 5/6 at Cutout (GE)
NOTE	NOTE	54-711-04	Strut Upper Spar Bay 5/6 at Cutout (GE)
NOTE	NOTE	54-712-03	Strut Upper Spar Bay 5 at Cutout (GE)
NOTE	NOTE	54-712-04	Strut Upper Spar Bay 5 at Cutout (GE)
NOTE	NOTE	54-713-03	Strut Upper Spar Bay 6 at Cutout (GE)
NOTE	NOTE	54-713-04	Strut Upper Spar Bay 6 at Cutout (GE)
NOTE	NOTE	54-716-02	Side Skin Cutout (GE)
NOTE	NOTE	54-716-03	Side Skin Cutout (GE)
NOTE	NOTE	54-717-03	Lower Spar Bay 3 (GE)
NOTE	NOTE	54-717-04	Lower Spar Bay 3 (GE)
NOTE	NOTE	54-781-01	Aluminum Aft Strut Bulkhead (RR)
NOTE	NOTE	54-781-02	Aluminum Aft Strut Bulkhead (RR)
NOTE	NOTE	57-704-02	SOB Splice, Front Spar Chord
NOTE	NOTE	57-704-03	SOB Splice, Front Spar Chord
NOTE	NOTE	57-706-03	SOB Splice, Rear Spar Chord
NOTE	NOTE	57-706-04	SOB Splice, Rear Spar Chord
NOTE	NOTE	57-711-06	Wing Center Section, Lower Rear Spar Chord, Lower Chord
NOTE	NOTE	57-711-07	Wing Center Section, Lower Rear Spar Chord, Lower Chord
NOTE	NOTE	57-711-08	Wing Center Section, Lower Rear Spar Chord, Lower Chord
NOTE	NOTE	57-711-09	Wing Center Section, Lower Rear Spar Chord, Lower Chord
NOTE	NOTE	57-711-10	Wing Center Section, Lower Rear Spar Chord, Lower Chord
NOTE	NOTE	57-711-12	Wing Center Section, Lower Rear Spar Chord, Lower Chord
NOTE	NOTE	57-712-03	Wing Center Section, Lower Rear Spar Chord, Lower Skin



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
NOTE	NOTE	57-712-04	Wing Center Section, Lower Rear Spar Chord, Lower Skin
NOTE	NOTE	57-713-03	Wing Center Section, Lower Panel Keel Beam Chord, Lower Skin
NOTE	NOTE	57-713-04	Wing Center Section, Lower Panel Keel Beam Chord, Lower Skin
NOTE	NOTE	57-716-04	Wing Outboard, Typical Rear Spar Attachment, Lower Chord
NOTE	NOTE	57-716-05	Wing Outboard, Typical Rear Spar Attachment, Lower Chord
NOTE	NOTE	57-719-03	Wing Outboard, Typical Splice Stringers
NOTE	NOTE	57-719-04	Wing Outboard, Typical Splice Stringers
NOTE	NOTE	57-721-02	Wing Outboard, Typical Splice Stringer
NOTE	NOTE	57-721-03	Wing Outboard, Typical Splice Stringer
NOTE	NOTE	57-722-03	Wing Outboard, Lower Panel Rear Spar Chord, Lower Chord
NOTE	NOTE	57-722-04	Wing Outboard, Lower Panel Rear Spar Chord, Lower Chord
NOTE	NOTE	57-722-05	Wing Outboard, Lower Panel Rear Spar Chord, Lower Chord
NOTE	NOTE	57-722-06	Wing Outboard, Lower Panel Rear Spar Chord, Lower Chord
NOTE	NOTE	57-729-03	Wing Outboard, Typical Stringer Attachment at Nacelle Fitting
NOTE	NOTE	57-729-04	Wing Outboard, Typical Stringer Attachment at Nacelle Fitting
NOTE	NOTE	57-729-05	Wing Outboard, Typical Stringer Attachment at Nacelle Fitting
NOTE	NOTE	57-735-03	Wing Outboard, Upper Panel, Front Spar Upper Chord
NOTE	NOTE	57-735-04	Wing Outboard, Upper Panel, Front Spar Upper Chord
NOTE	NOTE	57-737-03	Wing Outboard Upper Panel, Rear Spar Upper Chord
NOTE	NOTE	57-737-04	Wing Outboard Upper Panel, Rear Spar Upper Chord
NOTE	NOTE	57-739-03	Wing Outboard, Upper Panel, Rear Spar Upper Chord
NOTE	NOTE	57-739-04	Wing Outboard, Upper Panel, Rear Spar Upper Chord
NOTE	NOTE	57-788-02	MLG Forward Trunnion Outboard Support Fitting
NOTE	NOTE	57-788-03	MLG Forward Trunnion Outboard Support Fitting



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
NOTE	NOTE	57-788-04	MLG Forward Trunnion Outboard Support Fitting
NOTE	NOTE	72-346-01	Fan Blade Lubrication
NOTE	NOTE	72-346-02	Fan Blade Lubrication
NOTE	NOTE	73-010-01	Restore All C2 Messages - Left
NOTE	NOTE	73-010-02	Restore All C2 Messages - Right
SHP VST	SHP VST	21-160-00	AC Pack Heat Exchangers
SHP VST	SHP VST	24-100-00	IDG and Backup Generator (VSCF) Heat Exchangers
SHP VST	SHP VST	26-120-00	Engine Fire Bottle Extinguishing Bottle Pressure Switches
SHP VST	SHP VST	26-170-00	APU Fire Extinguishing Bottle Pressure Switch
SHP VST	SHP VST	26-220-00	Cargo Fire Extinguishing Bottle Pressure Switches
SHP VST	SHP VST	26-278-00	Lower Lobe Attendant Rest Fire Extinguishing System
SHP VST	SHP VST	49-060-00	APU Combustor Drain Valve
VEN REC	VEN REC	24-190-00	Flight Control DC Power Battery
VEN REC	VEN REC	25-056-00	Inflatable Seat Restraint System
VEN REC	VEN REC	25-057-00	Inflatable Seat Restraint System Seatbelt Airbag Assembly (SAA)
VEN REC	VEN REC	25-058-00	Inflatable Seat Restraint System Gas Generator Assembly (GGA)
VEN REC	VEN REC	25-059-00	Inflatable Seat Restraint System Electronic Module Assembly (EMA) Battery
VEN REC	VEN REC	25-065-00	Off-Wing Emergency Escape Slide Assembly
VEN REC	VEN REC	25-100-00	Survival Kit - Life Vests (Jackets)
VEN REC	VEN REC	25-110-00	Life Vests (Jackets)
VEN REC	VEN REC	25-115-00	Flotation Cots
VEN REC	VEN REC	25-120-00	Emergency Locator Transmitters
VEN REC	VEN REC	25-125-00	Emergency Locator Transmitter (Batteries)
VEN REC	VEN REC	25-140-00	Emergency Medical Kit



777-200/300 MAINTENANCE PLANNING DOCUMENT

INTERVAL		MPD ITEM NUMBER	TASK TITLE
THRESHOLD	REPEAT		
VEN REC	VEN REC	25-145-00	Automated External Defibrillator
VEN REC	VEN REC	25-170-00	Emergency Flashlight Batteries
VEN REC	VEN REC	25-200-00	Megaphone Batteries
VEN REC	VEN REC	25-210-00	Emergency Escape Slide/Rafts
VEN REC	VEN REC	52-091-00	Passenger Entry Door EPAS Battery
VEN REC	VEN REC	52-091-01	Passenger Entry Door EPAS Battery
VEN REC	VEN REC	52-091-02	Passenger Entry Door EPAS Battery
VEN REC	VEN REC	52-096-00	No. 3 Over-Wing Door EPAS/Backup Battery
2 YR	2 YR	34-020-00	ATC Transponder System
6 YR	6 YR	23-190-00	Low Frequency Underwater Locator Device Battery
15 YR	15 YR	25-071-00	Off - Wing Slide Reservoir

